

# OPERATING MANUAL

## HD9408.3B

Barometric  
transmitter



EN

V1.8



## Contents

<b>1</b>	<b>Introduction .....</b>	<b>3</b>
<b>2</b>	<b>Technical specifications.....</b>	<b>4</b>
<b>3</b>	<b>Description .....</b>	<b>6</b>
<b>4</b>	<b>Installation.....</b>	<b>7</b>
4.1	HD9408.3B.1 and HD9408.3B.2 electrical connections .....	7
4.1.1	RS485 connection.....	7
4.1.2	RS422 connection.....	8
4.1.3	RS232 connection.....	9
4.1.4	Connection of the analog output .....	9
4.2	HD9408.3B.3 electrical connections .....	10
4.2.1	SDI-12 Connection .....	10
<b>5</b>	<b>Configuration.....</b>	<b>11</b>
5.1	Choosing the digital output type in HD9408.3B.1 and HD9408.3B.2 .....	11
5.2	Choosing the protocol in HD9408.3B.1 and HD9408.3B.2 .....	11
5.3	Selecting the unit of measurement .....	12
5.4	Configuring the analog output.....	12
5.5	Serial commands of ASCII protocol for HD9408.3B.1 and HD9408.3B.2 .....	13
5.6	Serial commands of ASCII protocol for HD9408.3B.3 .....	16
<b>6</b>	<b>Modbus-RTU protocol .....</b>	<b>19</b>
6.1	Measurements reading .....	19
6.2	Setting the Modbus parameters .....	19
6.3	Configuration register .....	21
6.4	Error register.....	21
<b>7</b>	<b>NMEA protocol .....</b>	<b>22</b>
<b>8</b>	<b>SDI-12 protocol .....</b>	<b>23</b>
<b>9</b>	<b>Maintenance .....</b>	<b>28</b>
<b>10</b>	<b>Safety instructions .....</b>	<b>28</b>
<b>11</b>	<b>Accessories ordering codes .....</b>	<b>29</b>

## 1 Introduction

HD9408.3B is a barometric transmitter that uses a piezoresistive high accuracy and temperature-compensated sensor. It allows measuring the atmospheric pressure with extreme accuracy, time stability, excellent repeatability, low hysteresis and excellent temperature behavior.

Pressure measuring ranges:

- 0...1350 hPa (HD9408.3B.1 and HD9408.3B.2 digital outputs)
- 100...1350 hPa (HD9408.3B.3 SDI-12 output)
- 500...1200 hPa (HD9408.3B.1 and HD9408.3B.2 analog outputs)

The superior performances are obtained thanks to the employment of a piezoresistive Silicon sensor that integrates both a pressure sensitive as well as a temperature sensitive element. The measurement of pressure and temperature are processed by a microprocessor to obtain an output signal that is compensated over the transmitter's whole, wide temperature operating range: -40...+85°C.

The sensor is factory calibrated at several points at different temperatures in the range of use.

The transmitter is available in three versions which differ in the output type:

- **HD9408.3B.1:** configurable 0...5 V or 1...5 V analogue voltage output and digital RS232, RS422 or RS485 output. Standard MODBUS-RTU and NMEA 0183 protocols.
- **HD9408.3B.2:** active configurable 0...20 mA or 4...20 mA current output and digital RS232, RS422 or RS485 output. Standard MODBUS-RTU and NMEA 0183 protocols.
- **HD9408.3B.3:** digital SDI-12 output, compatible with version 1.3 of the protocol.

The digital output enables the transmission of the measurements over long distances and connects the transmitter to sensor networks.

The pressure measured and transmitted with Modbus-RTU and SDI-12 protocols can be expressed in different user-selectable measuring units.


The watertight housing with **IP 67** protection degree allows the use of the instrument even in harsh environments.

The instrument is particularly suitable for meteorological applications (AWOS - Automated Weather Observing Systems), environmental monitoring systems, meteorological and environmental data logging, measurement laboratories, atmospheric pressure compensation in the performance of internal combustion engines, barometric pressure compensation in clean rooms, vehicle emission test.

Its low power consumption makes it ideal for remote acquisition systems such as automatic weather stations powered by solar cells.

## 2 Technical specifications

<b>Sensor</b>	High accuracy piezoresistive
<b>Measuring range</b>	<b>HD9408.3B.1 e HD9408.3B.2:</b> 0...1350 hPa digital outputs / 500...1200 hPa analog outputs <b>HD9408.3B.3:</b> 100...1350 hPa
<b>Resolution</b>	0.01 hPa
<b>Accuracy</b>	<b>Digital outputs:</b> ± 0.1 hPa (500...1200 hPa) / ± 0.2 hPa (remaining range) @ 23 °C ± 0.3 hPa (500...1200 hPa) / ± 0.4 hPa (remaining range) @ -40...+85 °C <b>Analog outputs:</b> ± 0.3 hPa (500...1200 hPa) @ 23 °C ± 0.6 hPa (500...1200 hPa) @ -40...+85 °C
<b>Measuring units (Modbus and SDI-12 protocols)</b>	Pa, hPa, kPa, mbar, bar, atm, psi, mmHg, inHg, mmH <sub>2</sub> O, ftH <sub>2</sub> O, kg/cm <sup>2</sup> , Torr.
<b>Long term stability @ 25 °C</b>	0.25 hPa/year
<b>Output</b>	<b>HD9408.3B.1:</b> RS485 / RS422 / RS232 / analog 0...5 or 1...5 V <b>HD9408.3B.2:</b> RS485 / RS422 / RS232 / analog 0...20 or 4...20 mA <b>HD9408.3B.3:</b> SDI-12
<b>Warm-up time</b>	2 s approx. from powering
<b>Measuring period</b>	<b>HD9408.3B.1 and HD9408.3B.2:</b> 16 ms <b>HD9408.3B.3:</b> upon user request
<b>Analog output response time</b>	150 ms to reach 90% of final value with step pressure input (from 600 to 1000 hPa)
<b>Overpressure limit</b>	3 x f.s.
<b>Compatible media</b>	Only dry air and non-corrosive gases
<b>Power supply</b>	<b>HD9408.3B.1 and HD9408.3B.2:</b> 10...30 Vdc <b>HD9408.3B.3:</b> 8...30 Vdc
<b>Absorption</b>	<b>HD9408.3B.1 and HD9408.3B.2:</b> < 10 mA @ 12 Vdc <b>HD9408.3B.3:</b> < 200 µA @ 12 Vdc (average consumption between two subsequent measurements)
<b>Pressure connection</b>	Ø 5 mm flexible tube
<b>Electrical connections</b>	M12
<b>Operating conditions</b>	-40...+85 °C / 0...100 %RH
<b>Storage temperature</b>	-40...+85 °C
<b>Housing material</b>	Anticorodal
<b>Protection degree</b>	IP67

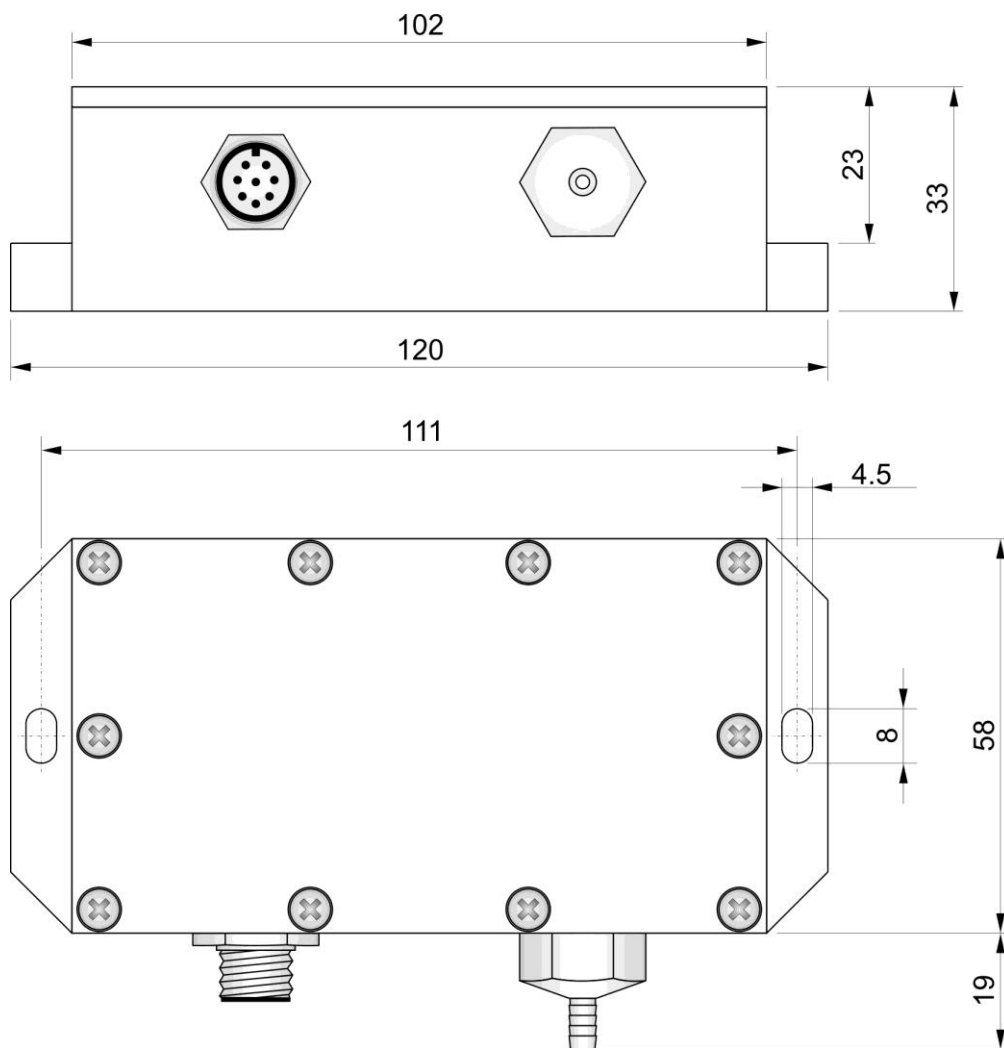**Dimensions (mm):**

### 3 Description




1. Housing mounting holes.
2. M12 connector for power supply and outputs.
3. Barometric pressure input.

## 4 Installation

The sensor and electronics are housed in a sturdy metal housing with IP 67 degree of protection. The transmitter can be mounted in any position, but typically is attached to a vertical wall with the outlet pressure facing downward. The two holes on the housing's sides allow you to secure the base of the transmitter directly to a panel or a wall. See the chapter "Technical specifications" for the dimensions of the mounting holes.

### 4.1 HD9408.3B.1 and HD9408.3B.2 electrical connections

HD9408.3B.1 and HD9408.3B.2 have an 8-pole connector and use the **CP18... optional** cables with 8-pole connector on one side and open wires on the other side.

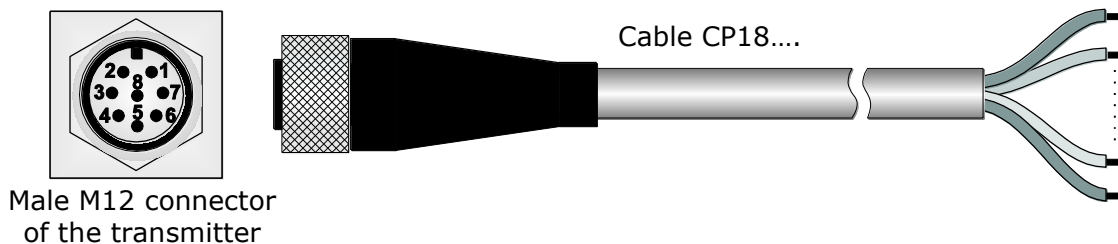

**Fig. 4.1.1: CP18... cable**

**TAB. 4.1.1: HD9408.3B.1 and HD9408.3B.2 connections**

Connector pin N°	Function		CP18... cable wire N°/colour
	Symbol	Description	
1	PWR-	Power Negative / serial grounding	12/Black + 7/Violet + 6/Pink (*)
2	PWR+	Power Positive	1/Red + 2/Blue + 4/Grey-Pink (*)
3	RX-	Rx- for RS422	3/Yellow
4	TX-	Tx for RS232/ Tx- for RS422 DATA- for RS485	9/White
5	TX+	Tx+ for RS422 / DATA+ for RS485	5/Red-Blue
6	RX+	Rx for RS232/ Rx+ for RS422	8/Grey
7	AGND	Analog output Negative	10/Brown
8	AOUT	Analog output Positive	11/Green


(\*) Wires shorted on the connector pin.

#### 4.1.1 RS485 connection

The RS485 connection of the transmitter is made over a screened twisted-pair cable for the signals and a third grounding wire.

At the beginning and at the end of each segment you should apply the line terminator.

The maximum number of devices that can be connected to the (Bus) line 485 depends on the load characteristics of the devices to be connected. The RS485 standard requires that the total load does not exceed 32 unit loads. The load of a transmitter is equal to 1 unit load. If the total load is greater than 32 unit loads, divide the network into segments and then put a signal repeater between a segment and the next. At the beginning and end of each segment of the line, terminations should be applied. The RS485 output of the transmitter is not isolated.

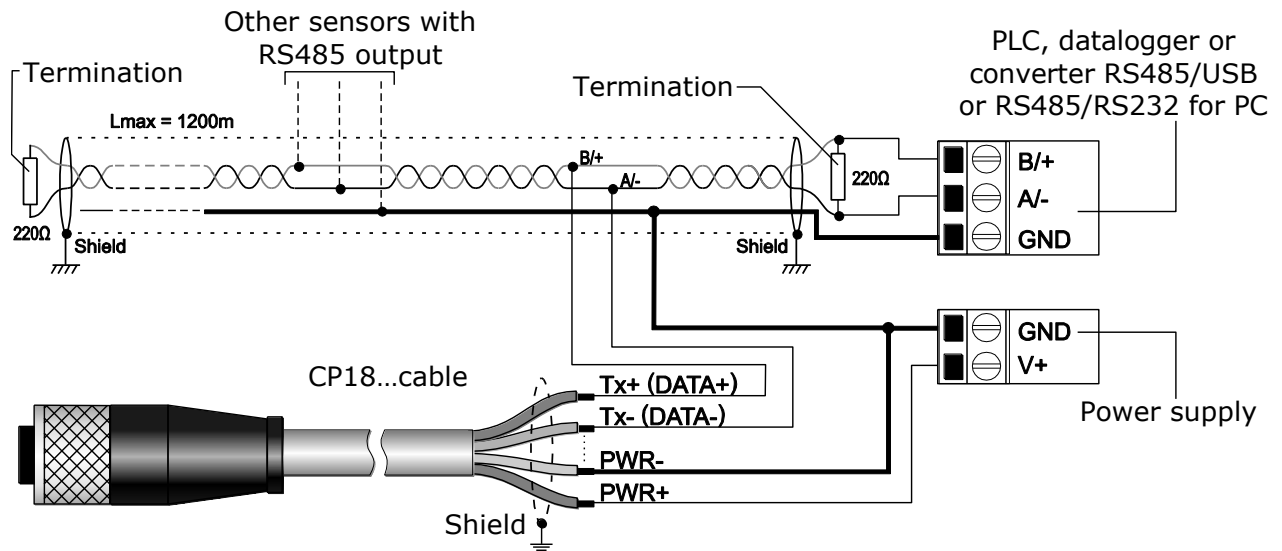

**Fig. 4.1.2: RS485 connection**


The cable maximum length depends on baud rate and cable characteristics. Typically, the maximum length is 1200m. The data line must be kept separated from any power lines in order to prevent interferences on the transmitted signal.

Each transmitter placed on the network is univocally identified by an address. **Transmitters having the same address shall not be present in the network.**

NMEA, Modbus-RTU and ASCII proprietary protocols can be used with RS485 connection. Before connecting the instrument to the network, configure address and Baud Rate (see paragraph 5.5).

#### 4.1.2 RS422 connection

The RS422 standard is used for the point-to-point connection over long distances. The instrument is connected to the PC by means of a screened cable with two twisted-pair cables for the signals and an additional wire for grounding. It is necessary to provide for line terminations at the ends of the connections.

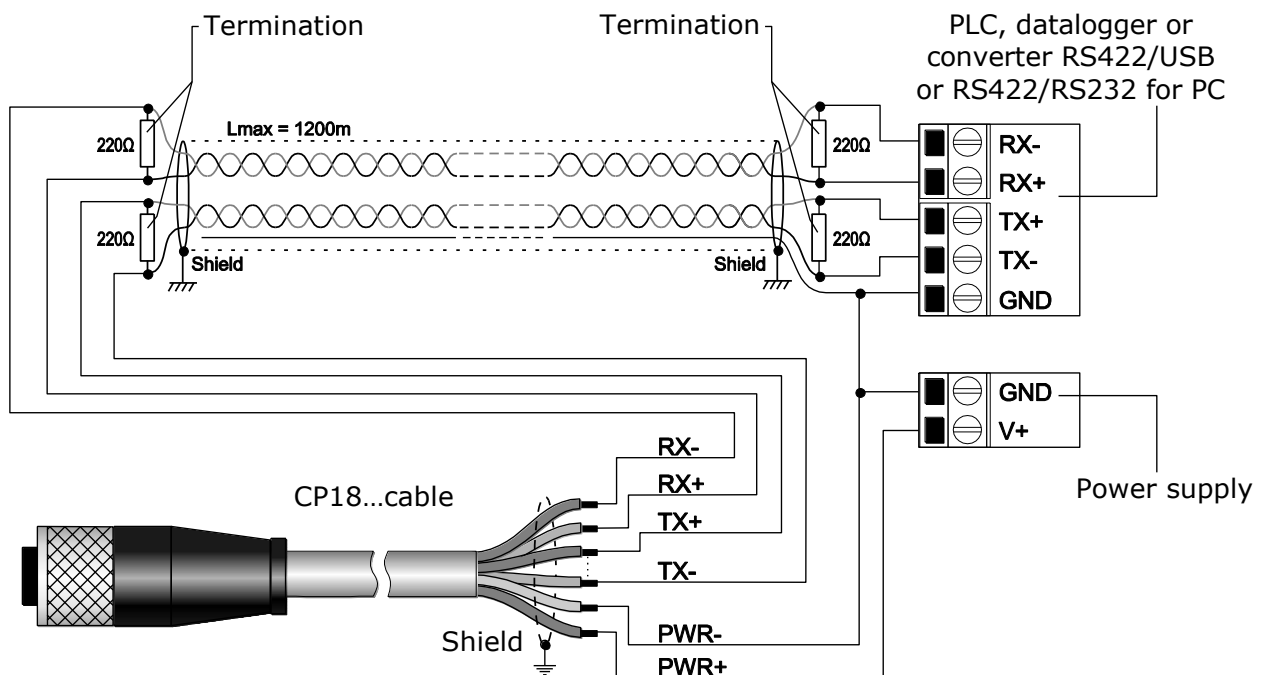

**Fig. 4.1.3: RS422 connection**




The cable maximum length depends on baud rate and cable characteristics. Typically, the maximum length is 1200m. The data line must be kept separated from any power lines in order to prevent interferences on the transmitted signal.

NMEA, MODBUS-RTU and ASCII proprietary protocols can be used with RS422 connection. Before connecting the instrument to the network, configure address and Baud Rate (see paragraph 5.5).

#### 4.1.3 RS232 connection


The length of RS232 cables should not exceed 15 m. If the PC is not fitted with RS232 serial ports, it is possible to interpose the adapter cable **RS52** (optional) between instrument and PC, which has an integrated USB/RS232 converter.

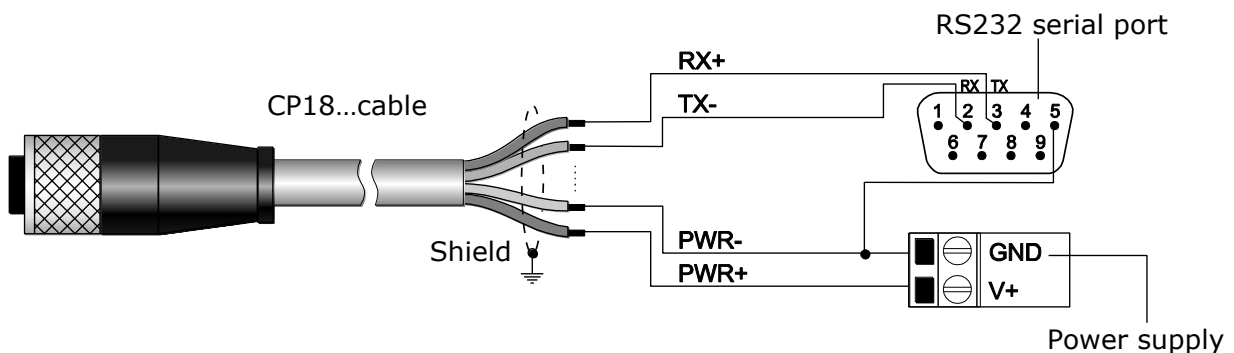

**Fig. 4.1.4: RS232 connection**


NMEA and ASCII proprietary protocols can be used with RS232 connection.

#### 4.1.4 Connection of the analog output

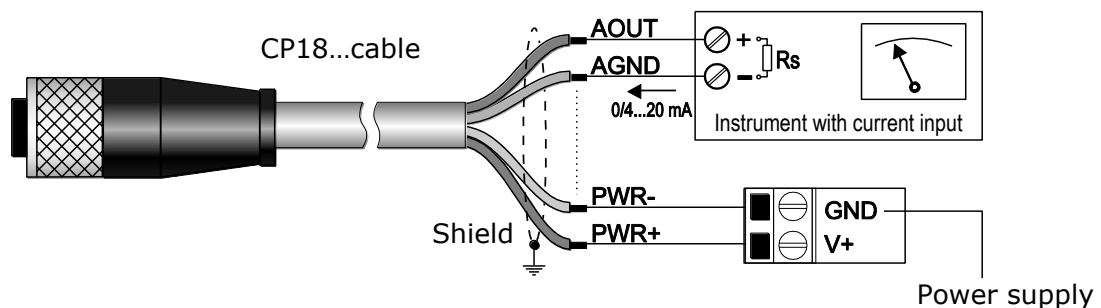

**Fig. 4.1.5: connection of the active 0...20/4...20 mA analog output**

In case of analog current output, the maximum shunt resistance  $R_s$  of the receiver depends on the power supply:  $R_s \leq 100 \Omega$  @ 12V,  $R_s \leq 700 \Omega$  @ 24V.

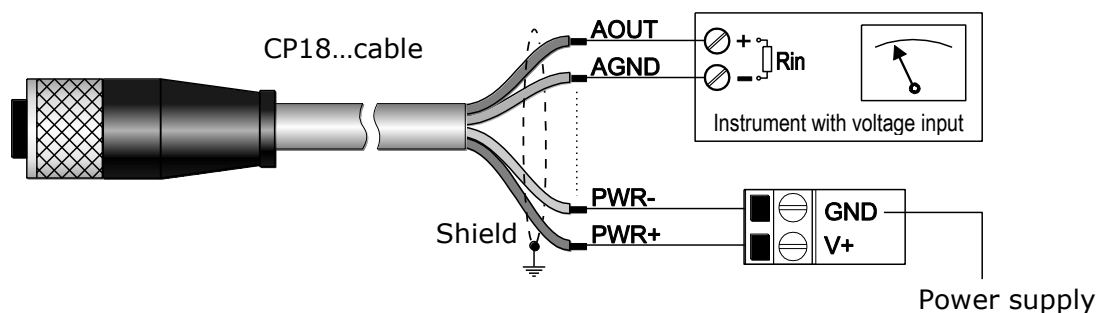


**Fig. 4.1.6: connection of analog 0...5/1...5 V voltage output**

In case of analog voltage output, the input resistance  $R_{in}$  of the receiver should be at least 100 k $\Omega$ .

## 4.2 HD9408.3B.3 electrical connections

HD9408.3B.3 has a 4-pole connector and use the **CPM12AA4... optional** cables with 4-pole connector on one side and open wires on the other side.

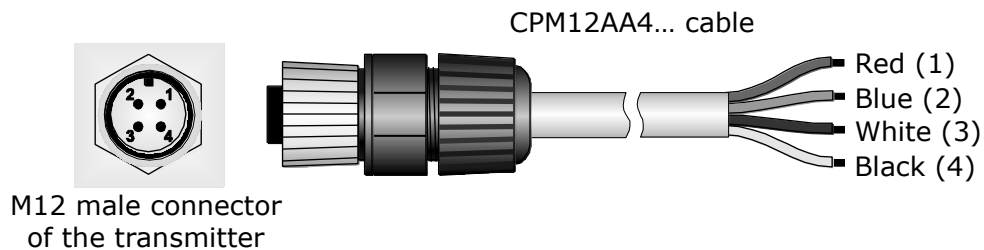


**Fig. 4.2.1: CPM12AA4... cable**

**TAB. 4.2.1: connections of HD9408.3B.3**

Connector numbering	Function		Color
	Symbol	Description	
1	PWR+	Power Positive	Red
2	PWR-	Power Negative / serial grounding	Blue
3	SDI	SDI-12 data line	White
4		Screen	Black

### 4.2.1 SDI-12 Connection

More SDI-12 sensors can be connected in parallel. The distance between a sensor and the acquisition system should not exceed 60 m. Before connecting the instrument to an SDI-12 network containing other sensors, set the address by using the proper SDI-12 command (see chapter 8).

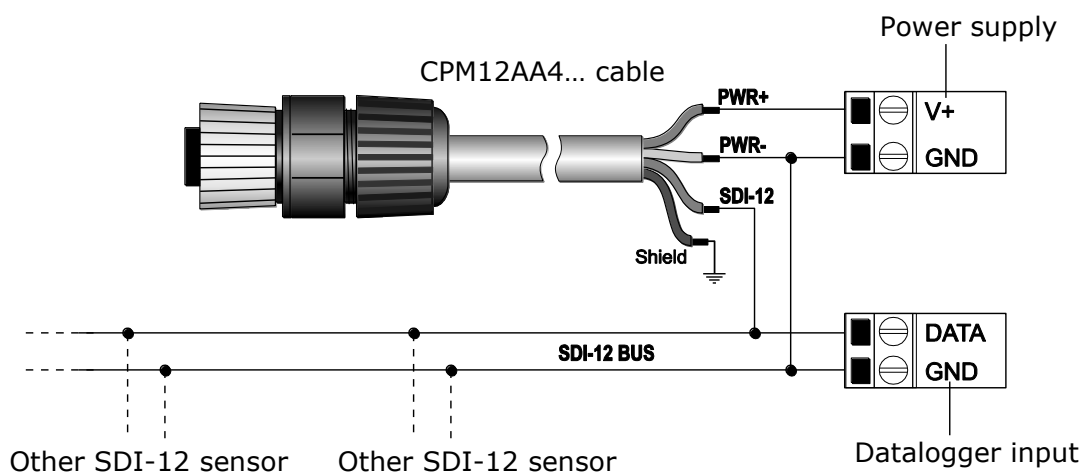


**Fig. 4.2.2: SDI-12 connection**

## 5 Configuration

When powered, the transmitter always starts to operate with the set operating protocol. The models HD9408.3B.1 and HD9408.3B.2 are factory set with Modbus-RTU protocol, RS485 physical interface, Baud Rate 19200 and communication parameters 8E1. To change the settings of the transmitter, see the next paragraphs.

### 5.1 Choosing the digital output type in HD9408.3B.1 and HD9408.3B.2

The models HD9408.3B.1 and HD9408.3B.2 allow selecting the type of digital output (RS232, RS422 or RS485) on hardware level, by means of dip switches on the electronic board, or at software level, by means of an appropriate serial command. By default, the RS485 output via the dip switches is set. To access the dip switches, unscrew the screws fixing the housing cover, remove the cover and set the dip switches as shown in the figure below.

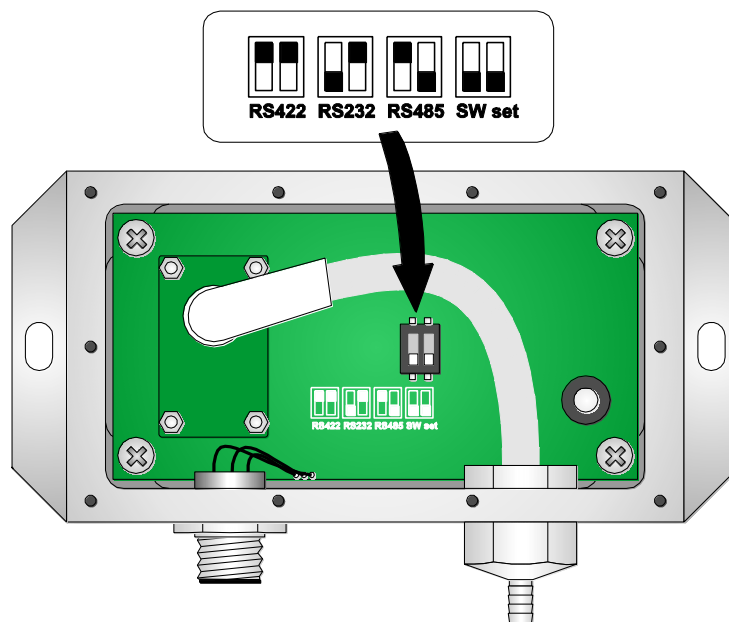

**Fig. 5.1.1: selecting the digital output by means of the dip switches**

The setting via the dip switches has priority over the setting via serial command. By selecting the option "**SW set**", the transmitter uses the digital output set at software level with the serial command **CPI** described in paragraph 5.5.

### 5.2 Choosing the protocol in HD9408.3B.1 and HD9408.3B.2

In the models HD9408.3B.1 and HD9408.3B.2, NMEA, Modbus-RTU and ASCII proprietary protocols are available. The selection of the protocol is done via the serial command **CPI** described in paragraph 5.5. If the transmitter digital output is set by means of the dip switches, the choice of the protocol must be compatible with the selected physical interface, as reported in the table below. By default, the MODBUS-RTU protocol with RS485 physical interface is set.

**TAB. 5.2.1: compatibility of physical interface/protocols in models HD9408.3B.1 and HD9408.3B.2**

		Physical Interface		
		RS232	RS422	RS485
Protocol	ASCII Proprietary	✓	✓	✓
	Modbus-RTU		✓	✓
	NMEA 0183	✓	✓	✓

### 5.3 Selecting the unit of measurement

The pressure measured and transmitted via the digital output with MODBUS-RTU and SDI-12 standard protocols can be expressed in a user selectable unit of measurement among. The default unit is hPa. The unit setting is done with the serial command **CPU** described in paragraph 5.5. The table below shows the resolution of the measurement as a function of the selected unit.

**TAB. 5.3.1: measuring unit and resolution with Modbus and SDI-12 protocols**

Unit of measurement	Resolution
Pa	1 Pa
hPa	0.01 hPa
kPa	0.001 kPa
mbar	0.01 mbar
bar	0.00001 bar
atm	0.00001 atm
psi	0.0001 psi
mmHg	0.001 mmHg
inHg	0.0001 inHg
mmH <sub>2</sub> O	0.1 mmH <sub>2</sub> O
ftH <sub>2</sub> O	0.0001 ftH <sub>2</sub> O
kg/cm <sup>2</sup>	0.00001 kg/cm <sup>2</sup>
Torr	0.001 Torr

With the NMEA protocol, the pressure value is transmitted in two fixed units: **Pa** and **bar**. With the ASCII proprietary protocol, the pressure is transmitted in the fixed units **mbar**, **psi** and **hPa**.

### 5.4 Configuring the analog output

The analog output in the models HD9408.3B.1 and HD9408.3B.2 is factory preset to have the output signal corresponding to the 500...1200 hPa measuring range. The analog output can be configured so as to have the output signal corresponding to a different measuring range by using the serial commands **CAI** (sets the initial value of the measuring interval) and **CAF** (sets the final value of the measuring interval).

To reverse the operation of the analog output, so that the output signal decreases as the measured pressure increases, use the serial command **CAiE**. To cancel the inversion and restore the output normal operation, use the serial command **CAiD**.

To add or remove an offset to the minimum value of the output signal, so that to pass from the range 0...5 V or 0...20 mA to the range 1...5 V or 4...20 mA and vice versa,

use the serial commands **CAOE** (adds the offset) and **CAOD** (remove the offset). The default mode is with offset.

The details on the use of the serial commands are described in paragraph 5.5.

## 5.5 Serial commands of ASCII protocol for HD9408.3B.1 and HD9408.3B.2

All the operating parameters can be set by connecting the transmitter to the PC and sending, via a standard serial communication program, the serial commands of the ASCII proprietary protocol.

The ASCII proprietary protocol can be used with RS232, RS485 and RS422 digital outputs. If the RS232 output is used and the PC has only USB ports, place between the PC and the instrument a RS232/USB converter. If the RS422 or RS485 digital output is used, place between the PC and the instrument a converter from RS422 or RS485 to RS232 or USB. For the wiring diagrams, see chapter "Installation".

If a USB converter is used, it is necessary to install the relevant USB drivers in the PC.

### PROCEDURE FOR SETTING THE PARAMETERS:

1. Connect the transmitter to the PC according to the selected digital output (the factory-set digital output is RS485) and power the transmitter. The transmitter always starts to operate with the set operating protocol.
2. Start a serial communication program. Set the COM port number to which the transmitter is connecting and the communication parameters the same as those of the protocol currently operating in the instrument: "57600, 8N2" for proprietary protocol, "19200, 8E1" for Modbus-RTU (default settings, the Modbus-RTU parameters are configurable), "4800 8N1" for NMEA.
3. If the set operating protocol is different from the ASCII proprietary protocol (the factory-set protocol is Modbus-RTU), send the command **|||** (sequence of three 124 decimal code ASCII characters followed by the Enter key). The transmitter replies with the sequence **&|**.
4. Within 10 seconds from the previous command, send the command **@** (64 decimal code ASCII character followed by the Enter key) to confirm the switch to the ASCII proprietary protocol. The transmitter replies with the sequence **&|**. Switching to the ASCII proprietary protocol, the previous communication parameters (baud rate, data bits, parity and stop bits) are maintained.  
Note: if the transmitter does not receive the command **@** within 10 seconds from the command **|||**, the previous protocol is automatically restored.
5. Send the command **CAL USER ON**.  
Note: the command CAL USER ON is disabled after 5 minutes of inactivity. The command is necessary only for the configuration writing commands, it is not necessary for the configuration reading commands.
6. Send the serial commands reported in table 5.5.1 to configure the transmitter or read the current settings.
7. To go back to the operating protocol, send the command **#** (35 decimal code ASCII character followed by the Enter key) or power cycle the instrument.

**TAB. 5.5.1: serial commands for HD9408.3B.1 and HD9408.3B.2**

Command	Reply	Description
<b>Instrument general information</b>		
<b>P0</b>	&	Ping
<b>G0</b>	<i>Model</i>	Instrument model
<b>G2</b>	<i>SN=number</i>	Serial number
<b>G3</b>	<i>Firm.Ver.=version</i>	Firmware version
<b>G4</b>	<i>Firm.Date=date</i>	Firmware date (yyyy/mm/dd)
<b>GD</b>	<i>F cal:date and time</i>	Date of factory calibration (yyyy/mm/dd hh:mm:ss)
<b>Measurements request</b>		
<b>S0</b>	& ###.##C (or F) ####.##mbar ###.####psi /F ####.##hPa	Last internal temperature (in °C or °F, accuracy ±1 °C) and pressure (in mbar and current unit) value measured. The parameter "/F" that appears in the reply is reserved.
<b>S1</b>	& ###.##C (or F) ####.##mbar ###.####psi /F ####.##hPa	Continuous sending, once per second, of the last internal temperature (in mbar and current unit) and pressure (in mbar, psi and hPa) value measured. The parameter "/F" that appears in the reply is reserved.
<b>Configuration of physical interface and protocol</b>		
<b>CPIIn</b>	&	Sets the physical interface and the protocol: n= <b>0</b> ⇒ RS485 with Modbus-RTU protocol n= <b>1</b> ⇒ RS422 with Modbus-RTU protocol n= <b>2</b> ⇒ RS232 with NMEA protocol n= <b>3</b> ⇒ RS485 with NMEA protocol n= <b>4</b> ⇒ RS422 with NMEA protocol n= <b>5</b> ⇒ RS232 with ASCII proprietary protocol n= <b>6</b> ⇒ RS485 with ASCII proprietary protocol n= <b>7</b> ⇒ RS422 with ASCII proprietary protocol Preset to 0 ⇒ RS485 with Modbus-RTU protocol.  <i>Note 1:</i> if the physical interface is set via hardware with the dip switches, only the commands setting a physical interface equal to that set via hardware are accepted.  <i>Note 2:</i> if the dip switches are set to "SW set", the command is always accepted, even if an interface different from the current physical connection is set (in such a case you will need to change the connections according to the new interface set in order to communicate again with the instrument).
<b>RAP</b>	& n	Reads the setting of physical interface and protocol (see the command CPUIn for the meaning of the value n).

Command	Reply	Description
<b>Configuration of units of measurement</b>		
<b>CPTx</b>	&	Sets the temperature unit of measurement read with the Modbus and SDI-12 protocols: x= <b>C</b> ⇒ °C, x= <b>F</b> ⇒ °F Preset to C ⇒ °C
<b>RAT</b>	& <i>unit of measurement</i>	Reads the temperature unit of measurement set for the Modbus and SDI-12 protocols.
<b>CPUn</b>	&	Sets the pressure unit of measurement read with the Modbus and SDI-12 protocols: n= <b>0</b> ⇒ Torr, n= <b>1</b> ⇒ Pa, n= <b>2</b> ⇒ hPa, n= <b>3</b> ⇒ kPa n= <b>4</b> ⇒ mbar, n= <b>5</b> ⇒ psi, n= <b>6</b> ⇒ kg/cm <sup>2</sup> , n= <b>7</b> ⇒ mmH <sub>2</sub> O n= <b>8</b> ⇒ mmHg, n= <b>9</b> ⇒ inHg, n= <b>A</b> ⇒ atm, n= <b>B</b> ⇒ bar n= <b>C</b> ⇒ ftH <sub>2</sub> O Preset to 2 ⇒ hPa
<b>RAU</b>	& n F	Reads the pressure unit of measurement set for Modbus and SDI-12 protocols. See command CPUn for the unit of measurement corresponding to the value n. "F" is a reserved parameter.
<b>Configuration of Modbus-RTU parameters</b>		
<b>CMAnnn</b>	&	Sets the Modbus address to nnn (1...247). Preset to 1.
<b>RMA</b>	& nnn	Reads the Modbus address.
<b>CMBn</b>	&	Sets the Modbus Baud Rate: n= <b>0</b> ⇒ 9600, n= <b>1</b> ⇒ 19200. Preset to 1 ⇒ 19200
<b>RMB</b>	& n	Reads the Modbus Baud Rate: n=0 ⇒ 9600, n=1 ⇒ 19200
<b>CMPn</b>	&	Sets the Modbus transmission mode: n= <b>0</b> ⇒ 8N1, n= <b>1</b> ⇒ 8N2, n= <b>2</b> ⇒ 8E1 n= <b>3</b> ⇒ 8E2, n= <b>4</b> ⇒ 8O1, n= <b>5</b> ⇒ 8O2 Preset to 2 ⇒ 8-E-1 Note: N=no parity, E=even parity, O=odd parity
<b>RMP</b>	& n	Reads the Modbus transmission mode (see the command CMPn for the mode corresponding to the value n).
<b>CMWn</b>	&	Sets the receiving mode after the Modbus transmission: n= <b>0</b> ⇒ Violate protocol and go in Rx mode right after Tx n= <b>1</b> ⇒ Respect protocol and wait for 3.5 characters after Tx Preset to 1 ⇒ Respect the protocol.
<b>RMW</b>	& n	Reads the receiving mode after the Modbus transmission (see the command CMWn for the mode corresponding to the value n):
<b>Configuration of NMEA parameters</b>		
<b>CPDnnnn</b>	&	Sets the sending interval of the string with the measurements in NMEA mode to nnnn seconds. The interval must be between 1 and 3600 seconds. Preset to 1 second.
<b>RN</b>	& nnnn	Reads the setting of the sending interval of the string with the measurements in NMEA mode.

Command	Reply	Description
<b>Configuration of analog output</b>		
<b>CAInnnnn</b>	&	Associates the initial scale of the analog output to the pressure value nnnnn expressed in tenth of hPa. The parameter must be between zero and the pressure value associated to the analog output full scale. Preset to 5000 (=500.0 hPa).
<b>RAI</b>	& nnnnn	Reads the value corresponding to the initial scale of the analog output.
<b>CAFnnnnn</b>	&	Associates the full scale of the analog output to the pressure value nnnnn expressed in tenth of hPa. The parameter must be between the pressure value associated to the initial scale of the analog output and 12000 (=1200.0 hPa). Preset to 12000.
<b>RAF</b>	& nnnnn	Reads the value corresponding to the full scale of the analog output.
<b>CAOE</b>	&	Adds offset to analog output (1...5 V or 4...20 mA).
<b>CAOD</b>	&	Remove offset from analog output (0...5 V or 0...20 mA).
<b>RAO</b>	& n	Reads the setting of the offset for the analog output: n=0 ⇒ senza offset, n=1 ⇒ con offset
<b>CAiE</b>	&	Reverses the direction of the analog output: 5...0 V, 5...1 V, 20...4 mA, 20...0 mA.
<b>CAiD</b>	&	Cancel the inversion of the direction of the analog output.
<b>RAi</b>	& n	Reads the setting of the direction of the analog output: n=0 ⇒ normal, n=1 ⇒ reversed
<b>Setting of sensor offset</b>		
<b>CAXnnnn</b>	&	Adds the offset nnnn, expressed in hundredths of hPa, to the measured pressure value. The parameter must be between -1000 (= -10.00 hPa) and +1000 (= +10.00 hPa). For positive values, always indicate also the + sign. Preset to 0.
<b>RAX</b>	& ###.##	Reads the offset set for the pressure measurement.

## 5.6 Serial commands of ASCII protocol for HD9408.3B.3

In the model HD9408.3B, the operating parameters can be set in two ways:

- directly with the SDI-12 protocol, via the extended commands described in chapter 8;
- by connecting the transmitter to the PC through a converter from SDI-12 to RS232 or USB, and by sending, via a standard serial communication program, the serial commands of the ASCII proprietary protocol.

If a USB converter is used, it is necessary to install the relevant USB drivers in the PC.

### PROCEDURE FOR SETTING THE PARAMETERS BY MEANS OF THE ASCII PROTOCOL:

1. Connect the transmitter to the PC (connect only one transmitter at a time) and power the transmitter. The transmitter always starts to operate with the SDI-12 protocol.
2. Start a serial communication program and set the COM port number to which the transmitter is connected and the communication parameters "1200, 7E1".



3. Send the command **aXf\_int\_424!** where **a** is the address of the transmitter (default 0). The transmitter replies with **fm activated!**.
4. Change the settings of the serial communication program as follows: "19200 8N2".
5. Send the command **CAL USER ON**.  
Note: the command CAL USER ON is disabled after 5 minutes of inactivity. The command is necessary only for the configuration writing commands, it is not necessary for the configuration reading commands.
6. Send the serial commands reported in table 5.6.1 to configure the transmitter or read the current settings (*note: use LF as command terminator*).
7. To go back to the operating protocol, power cycle the instrument.

**TAB. 5.6.1: serial commands for HD9408.3B.3**

Command	Reply	Description
<b>Instrument general information</b>		
<b>G0</b>	a:Model	Instrument model
<b>G2</b>	a:SN=number	Serial number
<b>G3</b>	a:Firm.Ver.=version	Firmware version
<b>G4</b>	a:Firm.Date=date	Firmware date (yyyy/mm/dd)
<b>GD</b>	a:F cal:date and time	Date of factory calibration (yyyy/mm/dd hh:mm:ss)
<b>Measurements request</b>		
<b>S0</b>	& ###.##C (or F) ####.##mbar ###.####psi /F ####.##hPa	Last internal temperature (in °C or °F, accuracy ±1 °C) and pressure (in mbar, psi and hPa) value measured. The parameter "/F" that appears in the reply is reserved.
<b>S1</b>	& ###.##C (or F) ####.##mbar ###.####psi /F ####.##hPa	Continuous sending, once per second, of the last internal temperature (in °C or °F, accuracy ±1 °C) and pressure (in mbar, psi and hPa) value measured. The parameter "/F" that appears in the reply is reserved.
<b>Configuration of units of measurement</b>		
<b>CPTx</b>	&	Sets the temperature unit of measurement read with the MODBUS and SDI-12 protocols: x= <b>C</b> ⇒ °C, x= <b>F</b> ⇒ °F Preset to C ⇒ °C
<b>RAT</b>	& unità di misura	Reads the temperature unit of measurement set for the Modbus and SDI-12 protocols.
<b>CPUn</b>	&	Sets the pressure unit of measurement read with the Modbus and SDI-12 protocols: n= <b>0</b> ⇒ Torr, n= <b>1</b> ⇒ Pa, n= <b>2</b> ⇒ hPa, n= <b>3</b> ⇒ kPa n= <b>4</b> ⇒ mbar, n= <b>5</b> ⇒ psi, n= <b>6</b> ⇒ kg/cm <sup>2</sup> , n= <b>7</b> ⇒ mmH <sub>2</sub> O n= <b>8</b> ⇒ mmHg, n= <b>9</b> ⇒ inHg, n= <b>A</b> ⇒ atm, n= <b>B</b> ⇒ bar n= <b>C</b> ⇒ ftH <sub>2</sub> O Preset to 2 ⇒ hPa
<b>RAU</b>	& n F	Reads the pressure unit of measurement set for Modbus and SDI-12 protocols. See command CPUn for the unit of measurement corresponding to the value n. "F" is a reserved parameter.

Command	Reply	Description
<b>Setting of sensor offset</b>		
<b>CAXnnnn</b>	&	Adds the offset nnnn, expressed in hundredths of hPa, to the measured pressure value. The parameter must be between -1000 (= -10.00 hPa) and +1000 (= +10.00 hPa). For positive values, always indicate also the + sign. Preset to 0.
<b>RAX</b>	& ###.##	Reads the offset set for the pressure measurement.

## 6 Modbus-RTU protocol

In MODBUS-RTU mode (only models HD9408.3B.1 and HD9408.3B.2), the instrument sends the acquired measurements only if specifically requested by the PC, PLC or data logger.

The protocol is available with RS485 and RS422 serial connections.

### 6.1 Measurements reading

Below is the list of registers.

**TAB. 6.1.1: Input Registers**

Address	Description	Format
0 + 1	Internal temperature in the set unit of measurement [x100]	32-bit integer
2 + 3	Atmospheric pressure in the set unit of measurement. See table 5.3.1 for the position of the decimal point.	32-bit integer

The measurements are signed 32-bit integer values. To read a measurement, two consecutive 16-bit registers must be accessed. The register with lower address (for example register with address 2 for the atmospheric pressure) contains the most significant bytes.

*Note:* the accuracy of the temperature measurement is  $\pm 1$  °C. The resolution is hundredths.

### 6.2 Setting the Modbus parameters

To set the Modbus address and the Modbus communication parameters, if different from the factory default values, use the serial commands **CMA** (sets the address), **CMB** (sets the Baud Rate), **CMP** (sets the parity and the stop bits) and **CMW** (sets the receiving mode) of the ASCII proprietary protocol (see the parameters setting procedure in paragraph 5.5).

Alternatively, the parameters can be set directly with Modbus commands by writing their values in the Holding Registers.

To check if the last writing operation has been completed successfully, verify that the Holding Register with address 0 contains the value 0.

**Writing parameters only changes the value in the RAM memory, the change is therefore cancelled in case of power supply failure.** To make the change permanent, write the hexadecimal value FF00 in the Coil Register with address 2, within 10 seconds from the last change command.

To check if the permanent storage has been completed successfully, verify that the Holding Register with address 1 contains the value 0.

**TAB. 6.2.1: Holding Registers**

Address	Description	Format
0	Indicator of the correct execution of the last writing command. If <b>0</b> , the command has been executed correctly. If <b>1</b> , command execution errors occurred.	16-bit integer
1	Indicator of the correct permanent storage of the parameters. If <b>0</b> , the parameters have stored correctly. If <b>1</b> , storage errors occurred.	16-bit integer
2	Error register (see paragraph 6.4)	16-bit integer
6	Configuration register (see paragraph 6.3)	16-bit integer
100	Modbus address (from 1 to 247). Preset to 1.	16-bit integer
101	Modbus Baud Rate. Acceptable values: 0 and 1. If <b>0</b> , the Baud Rate is 9600. If <b>1</b> , the Baud Rate is 19200. Preset to 1 ⇒ 19200	16-bit integer
102	Modbus transmission mode. Acceptable values: from 0 to 5. <b>0</b> ⇒ 8N1, <b>1</b> ⇒ 8N2, <b>2</b> ⇒ 8E1, <b>3</b> ⇒ 8E2 <b>4</b> ⇒ 8O1, n= <b>5</b> ⇒ 8O2 Preset to 2 ⇒ 8E1 Note: N=no parity, E=even parity, O=odd parity	16-bit integer
103	Receiving mode after the Modbus transmission. Acceptable values: 0 and 1. <b>0</b> ⇒ Violates the protocol and goes immediately in reception mode after the transmission <b>1</b> ⇒ Respects the protocol and waits for 3.5 characters after the transmission Preset to 1 ⇒ Respects the protocol.	16-bit integer

**TAB. 6.2.2: Coils**

Address	Description
2	Permanent storage of the parameters.

### 6.3 Configuration register

The configuration register (Holding Register with address 6) allows reading the offset applied to the pressure measurement and the setting of pressure and temperature units of measurement. The register is read-only. The meaning of the register bits is shown in the following table.

**TAB. 6.3.1: configuration register**

Bit	Description
0...10	Offset, expressed in hundredths of hPa, added to the measured pressure value. It is between -1000 (= -10.00 hPa) and +1000 (= +10.00 hPa). Default 0. Bit 10 indicates the sign of the value. Bits 0...9 indicate the absolute value expressed in 2's complement (bit 0 is the less significant): 3E8h $\Rightarrow$ +1000, 7FFh $\Rightarrow$ -1, 418h $\Rightarrow$ -1000
11...14	Pressure unit of measurement read with the Modbus protocol: <b>0h</b> $\Rightarrow$ Torr, <b>1h</b> $\Rightarrow$ Pa, <b>2h</b> $\Rightarrow$ hPa, <b>3h</b> $\Rightarrow$ kPa, <b>4h</b> $\Rightarrow$ mbar, <b>5h</b> $\Rightarrow$ psi, <b>6h</b> $\Rightarrow$ kg/cm <sup>2</sup> , <b>7h</b> $\Rightarrow$ mmH <sub>2</sub> O, <b>8h</b> $\Rightarrow$ mmHg, <b>9h</b> $\Rightarrow$ inHg, <b>Ah</b> $\Rightarrow$ atm, <b>Bh</b> $\Rightarrow$ bar, <b>Ch</b> $\Rightarrow$ ftH <sub>2</sub> O Bit 11 is the less significant. Default=2 $\Rightarrow$ hPa
15	Temperature unit of measurement read with the Modbus protocol: <b>0</b> $\Rightarrow$ °C, <b>1</b> $\Rightarrow$ °F Default=0 $\Rightarrow$ °C

### 6.4 Error register

The bits of the register indicate the error condition according to the correspondence shown in the following table.

**TAB. 6.4.1: error register**

Bit	Description
0	General error
1,2	Error in the values of the configuration parameters in memory
3	Error in the program memory
4	The power supply of the instrument is outside the allowed limits
5	Communication error
6	Error executing the measurement
7	Check of the instrument calibration is necessary
8	The device has executed a reset
9	Timeout of the temperature measurement
10	Error in the management of the analog output
11	Invalid data format
12...15	Not used

The register is reset after the reading. If the error condition persists, the corresponding bit is restored.

## 7 NMEA protocol

In NMEA mode (only models HD9408.3B.1 and HD9408.3B.2), the instrument sends automatically the acquired measurements at regular intervals. The interval is factory-set to 1 second and can be configured within 1 and 3600 seconds. To change the interval you should send the serial command **CPD** of the ASCII proprietary protocol (see the parameters setting procedure in paragraph 5.5).

The protocol is available with RS232, RS485 and RS422 serial connections. Communication parameters are "4800, 8N1".

The instrument is compatible with NMEA 0183 V4.00 protocol.

The protocol establishes that data are sent in the following format:

**\$PXDR,<Data>\*<hh><CR><LF>**


with:

- <Data> = values measured by the instrument, separated by commas
- <hh> = checksum, consisting in two hexadecimal characters
- <CR> = character ASCII *Carriage Return*
- <LF> = character ASCII *Line Feed*

The checksum is calculated by performing the exclusive OR of all characters ranging within \$ and \* symbols. The 4 most significant bits and the 4 less significant bits of the result are converted in hexadecimal. The hexadecimal value corresponding to the most significant bits is transmitted as the first.

The instrument regularly sends the following string:

**\$PXDR,P,xxxxxx,P,x.xxxxx,B,xx.xx,C\*hh<CR><LF>**

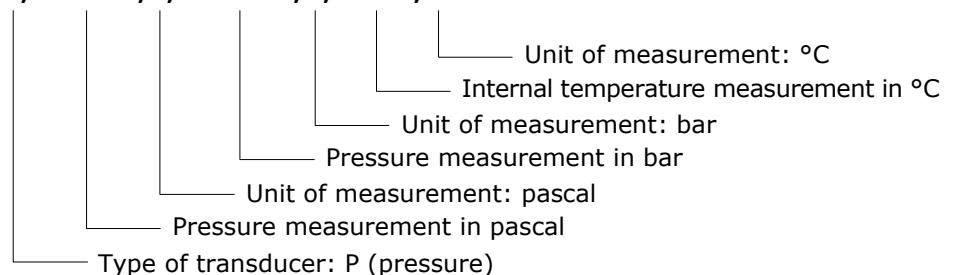

### EXAMPLE

Suppose that there are the following conditions:

- Atmospheric pressure = 1023.64 hPa
- Internal temperature = 26.28 °C

The strings sent by the instrument are:

**\$PXDR,P,102364,P,1.02364,B,26.28,C\*3D<CR><LF>**

*Note:* the accuracy of the internal temperature measurement is  $\pm 1$  °C.

For additional information regarding the protocol, visit the site "[www.nmea.org](http://www.nmea.org)".

## 8 SDI-12 protocol

The HD9408.3B.3 transmitter is equipped with an SDI-12 communication interface compliant with the version 1.3 of the protocol, which allows the connection to SDI-12 sensors networks.

The communication parameters are "1200, 7E1".

Communication with the instrument is performed by sending a command in the following format:

**< Address >< Command >!**

with: <Address> = address of the instrument the command is sent to

<Command> = type of operation requested to the instrument

The instrument reply is as follows:

**< Address ><Data><CR><LF>**

with: <Address> = address of the replying instrument

<Data> = information sent by the instrument

<CR> = ASCII character *Carriage Return*

<LF> = ASCII character *Line Feed*

The transmitter comes with a factory address preset to 0. The address can be modified by using the proper SDI-12 command reported in the following table.

The table below shows the available SDI-12 commands. To comply with the SDI-12 standard, the instrument address is indicated in the table with the letter **a**. The instrument leaves the factory with address preset to 0. The address can be changed by using the proper SDI-12 command reported in the table.

**TAB. 8.1: SDI-12 commands**

Command	Reply	Description
<b>a!</b>	a<CR><LF>	Checks for the presence of the instrument.
<b>aI!</b>	allccccccmmmmmmvvvsssssss<CR><LF> where: a = address of the instrument (1 character) ll = compatible SDI-12 version (2 characters) ccccccc = manufacturer (8 characters) mmmmmm = instrument model (6 characters) vvv = firmware version (3 characters) sssssss = serial number (8 characters)	Request for instrument information.
<b>aAb!</b> where: b = new address	b<CR><LF> Note: if character b is not an acceptable address, the instrument answers with a in the place of b.	Change of instrument address.
<b>?!</b>	a<CR><LF>	Request for instrument address. If more than a sensor is connected to the bus, a conflict will occur.

**Type M (start measurement) commands**

Command	Reply	Description
<b>Atmospheric pressure in mbar</b>		
<b>aM!</b>	atttn<CR><LF> with: ttt = number of seconds necessary for the instrument to make the measure available (3 characters) ttt is fixed to 002 n = number of detected variables (1 character) n is fixed to 1	Request for performing the measurement of atmospheric pressure in mbar.
<b>aD0!</b>	a+xxxx.xx<CR><LF> ⇒ Example of response: 0+1020.10 The instrument with address 0 measures 1020.10 mbar	Reads atmospheric pressure in mbar.
<b>Atmospheric pressure and internal temperature</b>		
<b>aM1!</b>	atttn<CR><LF> with: ttt = number of seconds necessary for the instrument to make the measure available (3 characters) ttt is fixed to 002 n = number of detected variables (1 character) n is fixed to 2	Request for performing the measurement of atmospheric pressure and internal temperature.
<b>aD0!</b>	a+xxxxx+xx.xx<CR><LF> ⇒ Example of response: 0+1020.10+28.35 The instrument with address 0 measures 1020.10 in the set pressure unit of measurement and 28.35 in the set temperature unit of measurement	Reads atmospheric pressure and internal temperature in the set units of measurement. (accuracy of temperature measurement: $\pm 1\text{ }^{\circ}\text{C}$ )
<b>Internal temperature</b>		
<b>aM2!</b>	atttn<CR><LF> with: ttt = number of seconds necessary for the instrument to make the measure available (3 characters) ttt is fixed to 002 n = number of detected variables (1 character) n is fixed to 1	Request for performing the measurement of internal temperature.
<b>aD0!</b>	a+xx.xx<CR><LF> ⇒ Example of response: 0+28.35 The instrument with address 0 measures 28.35 in the set temperature unit of measurement	Reads internal temperature in the set unit of measurement. (accuracy of temperature measurement: $\pm 1\text{ }^{\circ}\text{C}$ )



Command	Reply	Description
<b>Status and units of measurement</b>		
<b>aM3!</b>	atttn<CR><LF> with: ttt = number of seconds necessary for the instrument to make the info available (3 characters). ttt is fixed to 000. n = number of detected variables (1 character) n is fixed to 3	Request of transmitter status and units of measurement.
<b>aD0!</b>	a+s..s+nn+m<CR><LF> with: s..s = transmitter status nn = index of pressure unit of measurement m = index of temperature unit of measurement Indices of the pressure units of measurement nn = 00 ⇒ Torr           nn = 07 ⇒ mmH <sub>2</sub> O nn = 01 ⇒ Pa            nn = 08 ⇒ mmHg nn = 02 ⇒ hPa          nn = 09 ⇒ inHg nn = 03 ⇒ kPa          nn = 10 ⇒ atm nn = 04 ⇒ mbar         nn = 11 ⇒ bar nn = 05 ⇒ psi          nn = 12 ⇒ ftH <sub>2</sub> O nn = 06 ⇒ kg/cm <sup>2</sup> Indices of the temperature units of measurement m = 0 ⇒ °C m = 1 ⇒ °F The transmitter status is a decimal value that corresponds to the contents of a 16-bit register, the bits of which have the following meaning: Bit 0 = General error Bit 1, 2, 3 = Memory error Bit 4 = Power supply error Bit 5 = Communication error Bit 6 = Measurement error Bit 7 = Analog output error Bit 8 = Power-on reset Bit 9 = Temperature error Bit 10 = Temperature unit of measurement Bit 11 = Pressure error Bit 12...15 = Pressure unit of measurement	Reads the transmitter status and the units of measurement.

**Type C (start concurrent measurement) commands**

Command	Reply	Description
<b>aC!</b>	atttn<CR><LF> with: ttt = number of seconds necessary for the instrument to make the measure available (3 characters) ttt is fixed to 002 n = number of detected variables (1 character) n is fixed to 1	Request for performing the measurement of atmospheric pressure in mbar.
<b>aD0!</b>	a+xxxx.xx<CR><LF> ⇒ Example of response: 0+1020.10 Instrument with address 0 measures 1020.10 mbar	Reads atmospheric pressure in mbar.

**Type X (extended commands) commands**

<b>Command</b>	<b>Reply</b>	<b>Description</b>
<b>aXSG0!</b>	aModel <CR><LF>	Request of the instrument model.
<b>aXSG2!</b>	aSN=number <CR><LF>	Request of the instrument serial number.
<b>aXSG3!</b>	aFirm.Ver.=version <CR><LF>	Request of the firmware version.
<b>aXSG4!</b>	aAAAA/MM/GG <CR><LF>	Request of the firmware date.
<b>aXSCAL USER ON!</b>	a&USER ENABLED!<CR><LF>	Enables the configuration commands.
<b>aXSCPU!</b>	a& <CR><LF>	Sets the atmospheric pressure unit of measurement: n=0 ⇒ Torr, n=1 ⇒ Pa, n=2 ⇒ hPa, n=3 ⇒ kPa n=4 ⇒ mbar, n=5 ⇒ psi, n=6 ⇒ kg/cm <sup>2</sup> , n=7 ⇒ mmH <sub>2</sub> O n=8 ⇒ mmHg, n=9 ⇒ inHg, n=A ⇒ atm, n=B ⇒ bar n=C ⇒ ftH <sub>2</sub> O Preset to 2 ⇒ hPa
<b>aXSRAU!</b>	a&n <CR><LF>	Reads the set atmospheric pressure unit of measurement (see the command aXSCPU! for the unit of measurement corresponding to the value n).
<b>aXSCAXnnnn!</b>	a& <CR><LF>	Adds the offset nnnn, in hundredths of hPa, to the measured pressure value. nnnn must be between -1000 (= -10,00 hPa) and +1000 (= +10,00 hPa). For positive values, always indicate also the + sign. Preset to 0.
<b>aXSRAx!</b>	a&nnnn <CR><LF>	Reads the offset set for the pressure measurement.
<b>aXSCPTx!</b>	a& <CR><LF>	Sets the temperature unit of measurement: x=C ⇒ °C, x=F ⇒ °F Preset to C ⇒ °C
<b>aXSRAT!</b>	a&x <CR><LF>	Reads the set temperature unit of measurement (see the command aXSCPTx! for the unit of measurement corresponding to the value x).

The configuration commands aXSCPU!, aXSCAXnnnn! and aXSCPTx! require that the configuration mode is activated by sending the command aXSCAL USER ON!. The configuration mode is disabled if no configuration commands are sent for 5 minutes.

In addition to the above-mentioned commands, the transmitter also implements the corresponding commands with CRC, that require to add a 3-character CRC code at the end of the reply.

For more information about the protocol, visit the website "[www.sdi-12.org](http://www.sdi-12.org)".

## 9 Maintenance

Do not use aggressive cleaning agents or incompatible with the materials indicated in the technical specifications. For cleaning, use a soft dry cloth or slightly dampened with clean water.

## 10 Safety instructions

The instrument proper operation and operating safety can be ensured only in the climatic conditions specified in this manual and if all standard safety measures as well as the specific measures described in this manual are followed.

Do not use the instrument in places where there are:

- Corrosive or flammable gases.
- Direct vibrations or shocks to the instrument.
- High-intensity electromagnetic fields, static electricity.

### User obligations

The instrument operator shall follow the directives and regulations below that refer to the treatment of dangerous materials:

- EU directives on workplace safety.
- National law regulations on workplace safety.
- Accident prevention regulations.

## 11 Accessories ordering codes

**The cable is optional and has to be ordered separately.**

- CP18...** Cable with 8-pole M12 connector on one end, open wires on the other end. Length 5 m (CP18.5) or 10 m (CP18.10). **For HD9408.3B.1 and HD9408.3B.2.**
- CPM12AA4...** Cable with 4-pole M12 connector on one end, open wires on the other end. Length 5 m (CPM12AA4.5) or 10 m (CPM12AA4.10). **For HD9408.3B.3.**
- RS51K** Kit for connecting the transmitter RS485 output to a PC. It includes the SWD10 power supply and the RS485/USB adapter with:
- screw terminals for the connection to the CP18.x cable (not included);
  - USB connector for the connection to the PC;
  - jack connector for connecting the SWD10 power supply.
- RS52** Serial connection cable with built-in RS232/USB converter. USB connector for the PC and screw terminals on the instrument side.

**Notes**

---

## **WARRANTY**

The manufacturer is required to respond to the "factory warranty" only in those cases provided by Legislative Decree 6 September 2005 - n. 206. Each instrument is sold after rigorous inspections; if any manufacturing defect is found, it is necessary to contact the distributor where the instrument was purchased from. During the warranty period (24 months from the date of invoice) any manufacturing defects found will be repaired free of charge. Misuse, wear, neglect, lack or inefficient maintenance as well as theft and damage during transport are excluded. Warranty does not apply if changes, tampering or unauthorized repairs are made on the product. Solutions, probes, electrodes and microphones are not guaranteed as the improper use, even for a few minutes, may cause irreparable damages.


The manufacturer repairs the products that show defects of construction in accordance with the terms and conditions of warranty included in the manual of the product. For any dispute, the competent court is the Court of Padua. The Italian law and the "Convention on Contracts for the International Sales of Goods" apply.

## **TECHNICAL INFORMATION**

The quality level of our instruments is the result of the continuous product development. This may lead to differences between the information reported in the manual and the instrument you have purchased.

We reserve the right to change technical specifications and dimensions to fit the product requirements without prior notice.

## **DISPOSAL INFORMATION**

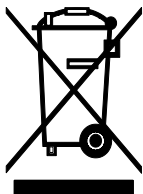

Electrical and electronic equipment marked with specific symbol in compliance with 2012/19/EU Directive must be disposed of separately from household waste. European users can hand them over to the dealer or to the manufacturer when purchasing a new electrical and electronic equipment, or to a WEEE collection point designated by local authorities. Illegal disposal is punished by law.

Disposing of electrical and electronic equipment separately from normal waste helps to preserve natural resources and allows materials to be recycled in an environmentally friendly way without risks to human health.



**senseca.com**



Senseca Italy S.r.l.  
Via Marconi, 5  
35030 Selvazzano Dentro (PD)  
ITALY  
[info@senseca.com](mailto:info@senseca.com)

