


Treppiedi HD2005.20 - HD2005.20.1


Inclusi: 1x  1x  13x  13x  4x  1x Dado M6 + 1x Vite M6x60 + 1x Rondella in Nylon sono di ricambio

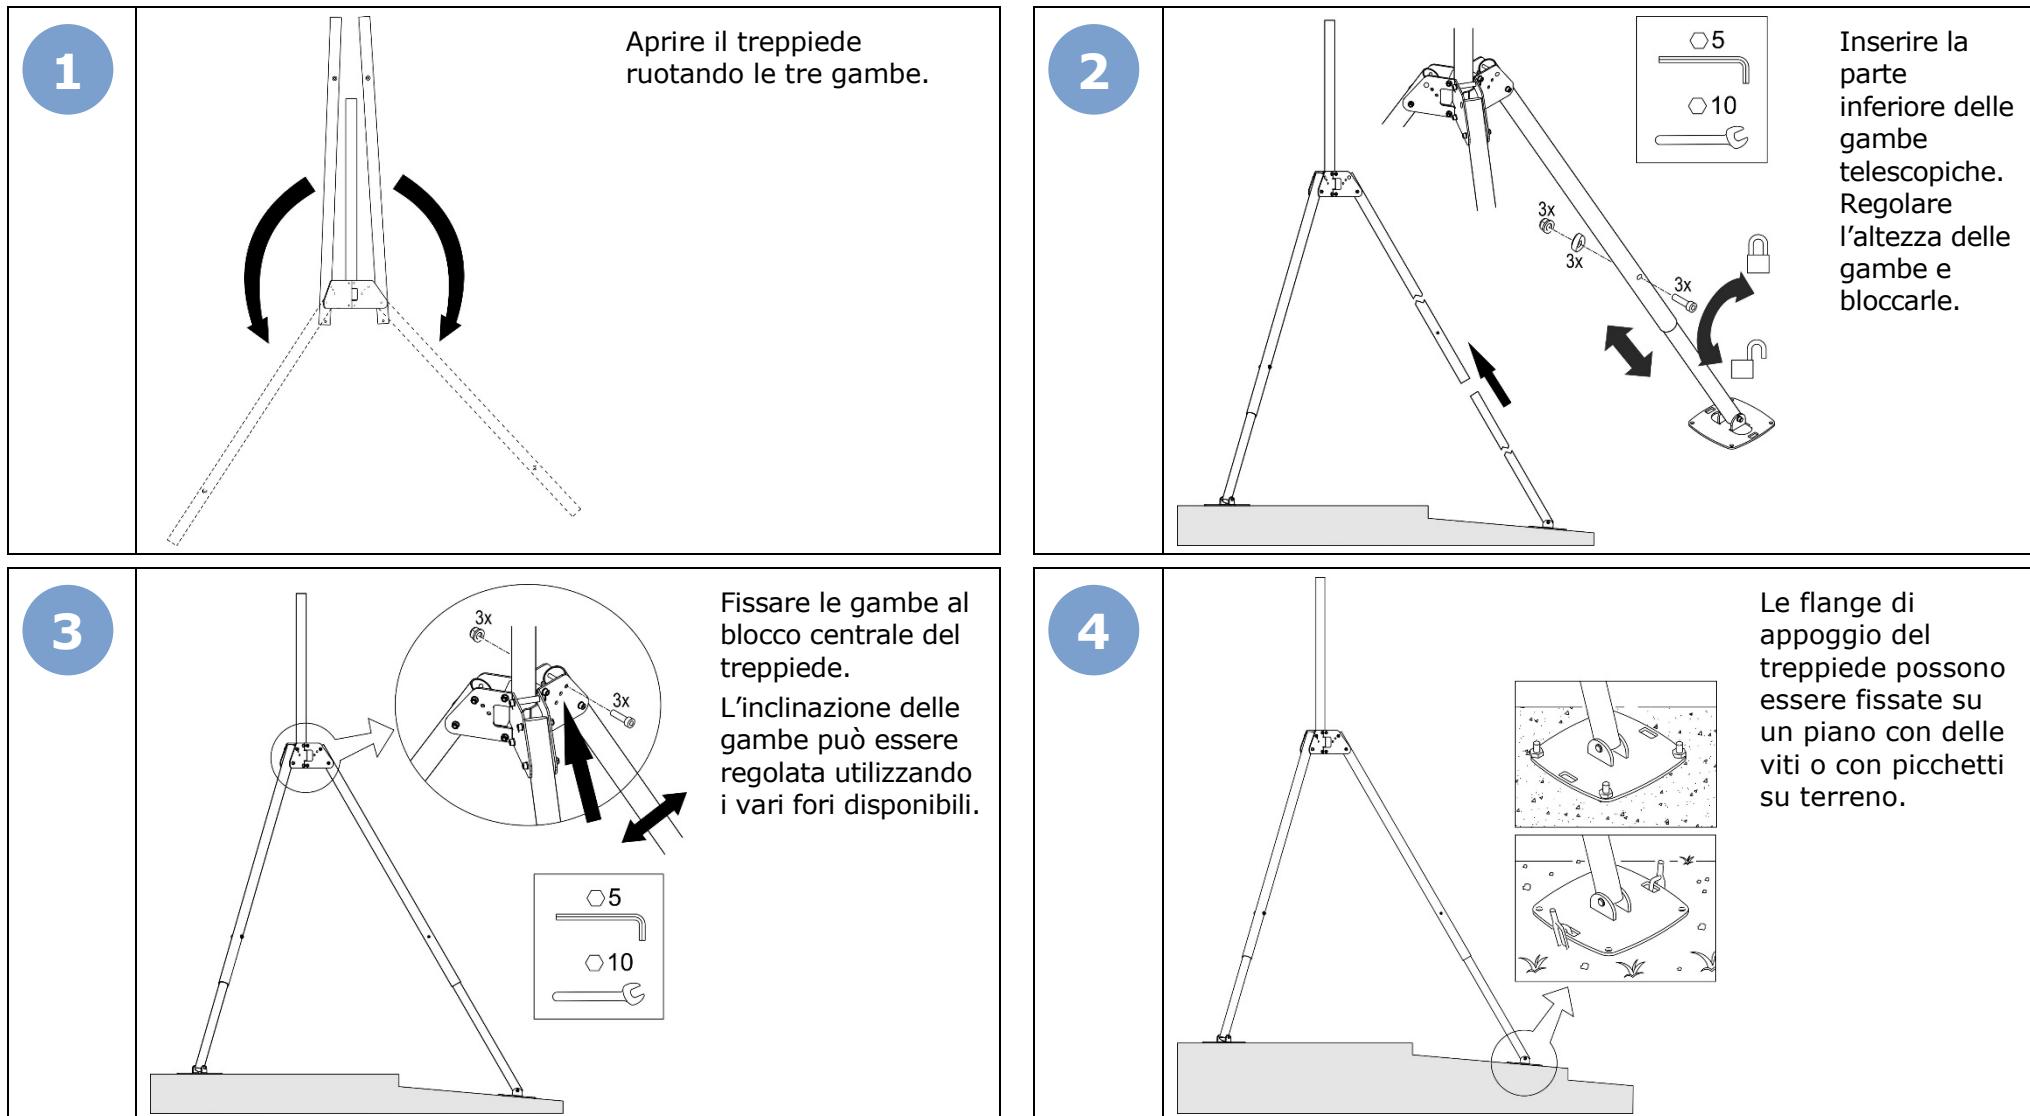

HD2005.20.1: fissare il palo prolunga da 1 m alla parte superiore del treppiede tramite il manico in dotazione.


HD2005.20 - HD2005.20.1 tripods

Included:




1x M6 Nut + 1x M6x60 Screw + 1x Nylon Washer are spare parts

1

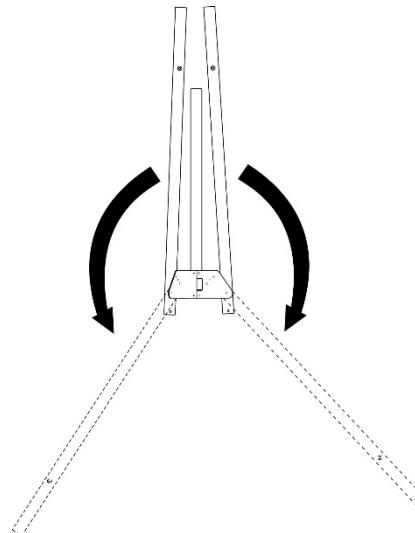

Open the tripod by turning the three legs.


2

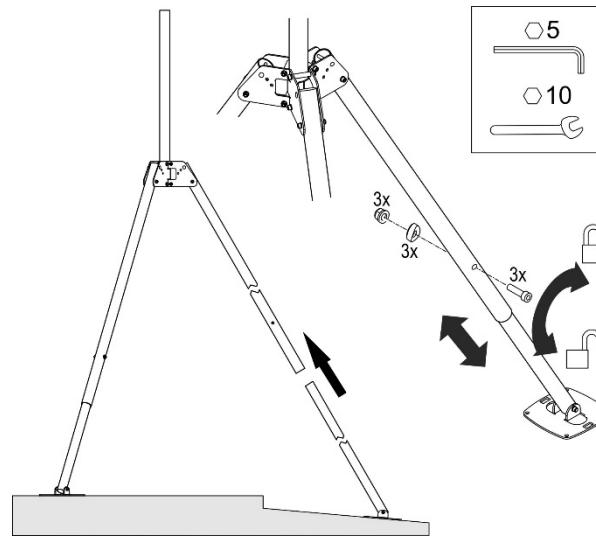

Insert the lower part of the telescopic legs.


Adjust the height of the legs and lock them.

3

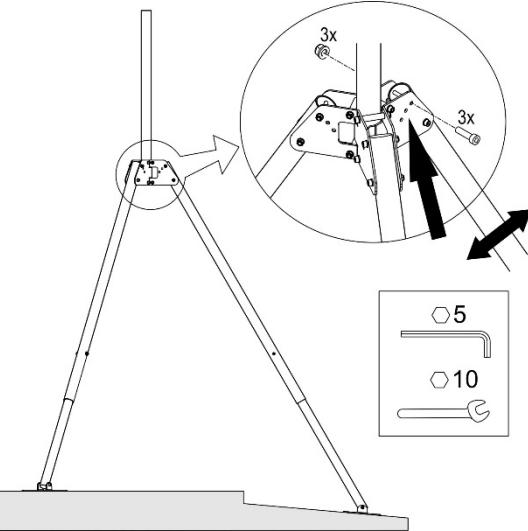

Secure the legs to the central block of the tripod.
The inclination of the legs can be adjusted using the various holes available.

4

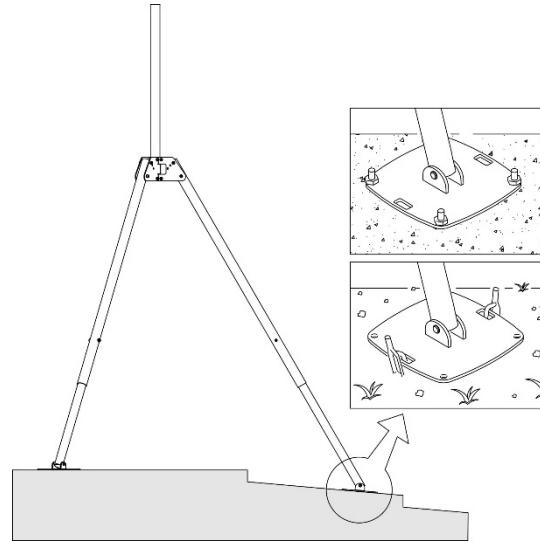

The flanges of the tripod can be fixed on a floor with screws or on the ground with pegs.

HD2005.20.1: attach the 1m extension mast to the top of the tripod using the supplied coupling.