


# OPERATING MANUAL

## HD50CR-AS

Low pressure  
transmitter and  
data logger

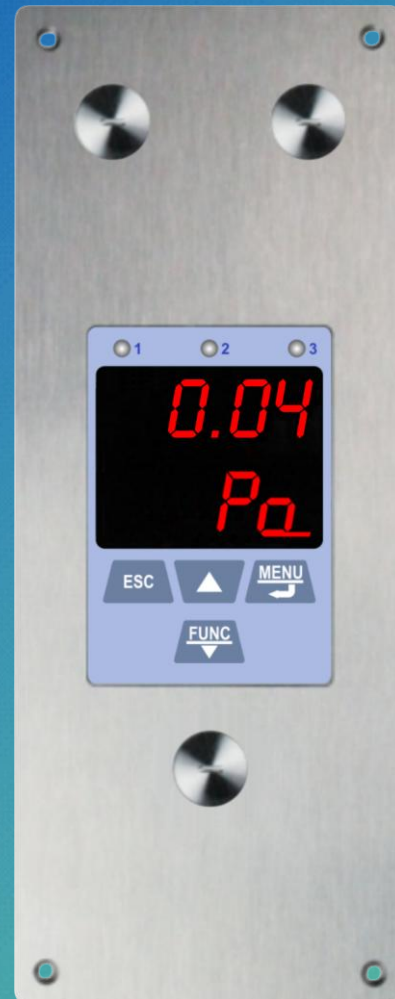

EN  
V2.0



## Contents

<b>1</b>	<b>Introduction .....</b>	<b>3</b>
<b>2</b>	<b>Technical specifications.....</b>	<b>4</b>
<b>3</b>	<b>Description .....</b>	<b>6</b>
<b>4</b>	<b>Installation.....</b>	<b>7</b>
4.1	Configuration .....	9
4.2	Integration coefficient of the differential pressure measurement.....	9
<b>5</b>	<b>Connection to local network .....</b>	<b>10</b>
5.1	HD35AP-CFR21 software option.....	10
<b>6</b>	<b>Alarms.....</b>	<b>11</b>
<b>7</b>	<b>Statistical functions.....</b>	<b>13</b>
<b>8</b>	<b>Calibration.....</b>	<b>14</b>
<b>9</b>	<b>Web server .....</b>	<b>15</b>
9.1	SETTINGS menu .....	16
9.2	MONITOR menu.....	21
9.3	CONNECTIVITY menu .....	23
9.4	FILES menu .....	30
<b>10</b>	<b>Menu .....</b>	<b>31</b>
<b>11</b>	<b>Modbus protocol .....</b>	<b>37</b>
<b>12</b>	<b>Maintenance .....</b>	<b>43</b>
<b>13</b>	<b>Safety instructions .....</b>	<b>43</b>
<b>14</b>	<b>Probes and accessories ordering codes .....</b>	<b>44</b>

## 1 Introduction

**HD50CR** is a relative or differential low pressure transmitter and data logger designed for wall flush-mounting. Measuring range  $\pm 125$  Pa.

A silicon piezoresistive sensor with high accuracy and temperature compensation is used, which allows excellent linearity, repeatability and stability over the time. The auto-zeroing feature allows stable measurements over the time without the need to recalibrate.

An input for an optional relative humidity and temperature combined probe is provided. The absolute humidity, the Dew Point and the wet bulb temperature are calculated.

Three 0...5/10 V and 0/4...20 mA analog outputs and a digital RS485 output with **"Slave" Modbus-RTU** protocol for connecting the instrument to a network of sensors are available.

The electroluminescent display has an inattinic red protection. The front keyboard allows scrolling the real time measurements and configuring the instrument.

The instrument can be connected to a local network via the **Ethernet** interface. The simultaneous operation of two communication protocols (proprietary and **Modbus TCP/IP**) is possible. The instrument manages up to 10 "TCP/IP Client" simultaneously. If the local network is connected to Internet, the data can be regularly sent to an **FTP** address, to the **Cloud** and via **e-mail**.

Equipped with a USB port with mini-USB connector for the direct connection to a PC.

For each detected quantity, two alarm thresholds can be set by the user. Exceeding a threshold is signaled acoustically, by means of the internal buzzer, visually, by lighting the alarm LEDs on the front panel (only for the three measurements associated with the analog outputs), and remotely, by sending alarm **e-mails**. An alarm hysteresis and a delay in the generation of the alarm can be configured for each detected quantity.

Thanks to the integrated web server, you can configure the instrument and view the real time measurements from any PC, tablet or smartphone connected to the same local network of the instrument by simply using a web browser.

The PC software **HD35AP-S** allows configuring the instrument, viewing the real time measurements, downloading and viewing the data into a database. The HD35AP-S software allows connecting one instrument at a time. If there are several HD50CR instruments in the local network, the PC software **HDServer1** allows detecting automatically all the instruments connected to the network and the simultaneous connection to all the instruments, entering the data received by the instruments into a database, viewing the data in the database and configuring some basic parameters of the devices (alarms, logging interval, ...). The **HD35AP-CFR21** software option (available with both HD35AP-S and HDServer1) allows the protection of recorded data and configuration in response to **FDA 21 CFR part 11** recommendations.

The internal clock can be regularly synchronized with a NIST reference server.

Brushed stainless steel front panel.


The instrument is supplied factory calibrated.

## 2 Technical specifications


Differential Pressure	
Sensor	Piezoresistive
Measuring range	$\pm 125$ Pa
Resolution	0.01 Pa
Accuracy	$\pm 0.35\%$ typ. of measuring span (2 x full scale pressure)
Zero drift	Self-calibration
Temperature drift	$\pm 0.5\%$ typ. of measuring span (2 x full scale pressure)
Units of measurement	Pa, mmH <sub>2</sub> O, mbar, inH <sub>2</sub> O, mmHg, hPa
Connection	$\varnothing$ 6 mm barbed inputs
Overpressure	24.9 kPa
Type of fluid	Air and neutral gases
Temperature (optional)	
Sensor	4-wire Pt100
Measuring range	-40...+150 °C
Resolution	0.01 °C
Accuracy	1/3 DIN
Stability	0.1 °C/year
Relative Humidity (optional)	
Sensor	Capacitive
Measuring range	0...100 %RH
Resolution	0.1 %RH
Accuracy	$\pm 1.8$ %RH (0..85 %RH) / $\pm 2.5$ %RH (85..100 %RH) @ T=15...35°C $\pm (2 + 1.5\%$ of the measure)% @ T=remaining range
Sensor operating temp.	-20...+80 °C
Response time	T <sub>90</sub> < 20 s (air speed = 2 m/s, without filter)
Temperature drift	$\pm 2\%$ in all the operating temperature range
Stability	1%/year
General characteristics	
Display	Red electroluminescent
Keyboard	Yes (4 keys)
Configuration	Via front keys, via USB, Ethernet and RS485 Modbus
Alarm	Buzzer on, LED lighting and sending of e-mails
Analog output	3 x 0/4...20 mA (active) or 3 x 0...5/10 V galvanically isolated
USB	Yes, HID type (no USB drivers) with front Mini-USB type B connector
RS485	Yes, with Slave Modbus-RTU protocol
Ethernet	Yes, RJ45 connector
Web server	Yes, for configuration and viewing the real time measurements
Protocols	Modbus-RTU, Modbus TCP/IP, SMTP, FTP, HTTP, NIST

Measuring interval	1, 2, 5, 10, 15, 30 s / 1, 2, 5, 10, 15, 30, 60 min
Logging interval	1, 2, 5, 10, 15, 30 s / 1, 2, 5, 10, 15, 30, 60 min
Internal memory	Circular management or stop logging if memory is full. Number of storable samples from 420,940 to 906,640 to depending on the number of quantities selected for logging.
Power supply	24 Vac / Vdc $\pm$ 10%
Power consumption	5 W
Electrical connections	Screw terminal block (max. 1.5 mm <sup>2</sup> / AWG16 cables)
Operating temperature	-10...+50 °C
Storage temperature	-10...+70 °C
Housing material	Stainless steel (AISI 316 front panel)
Weight	640 g approx.
Installation	Flush-mount
Protection degree	IP 65 (front panel, with protective cap on USB connector)

### Dimensions (mm)

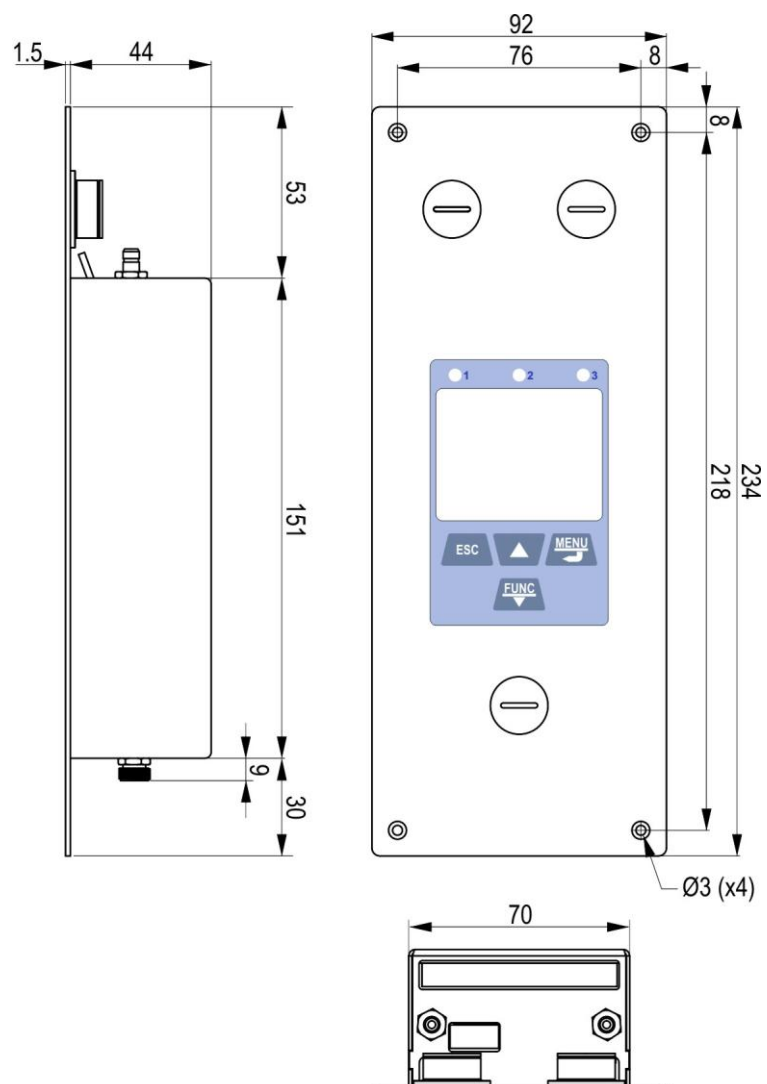

### 3 Description

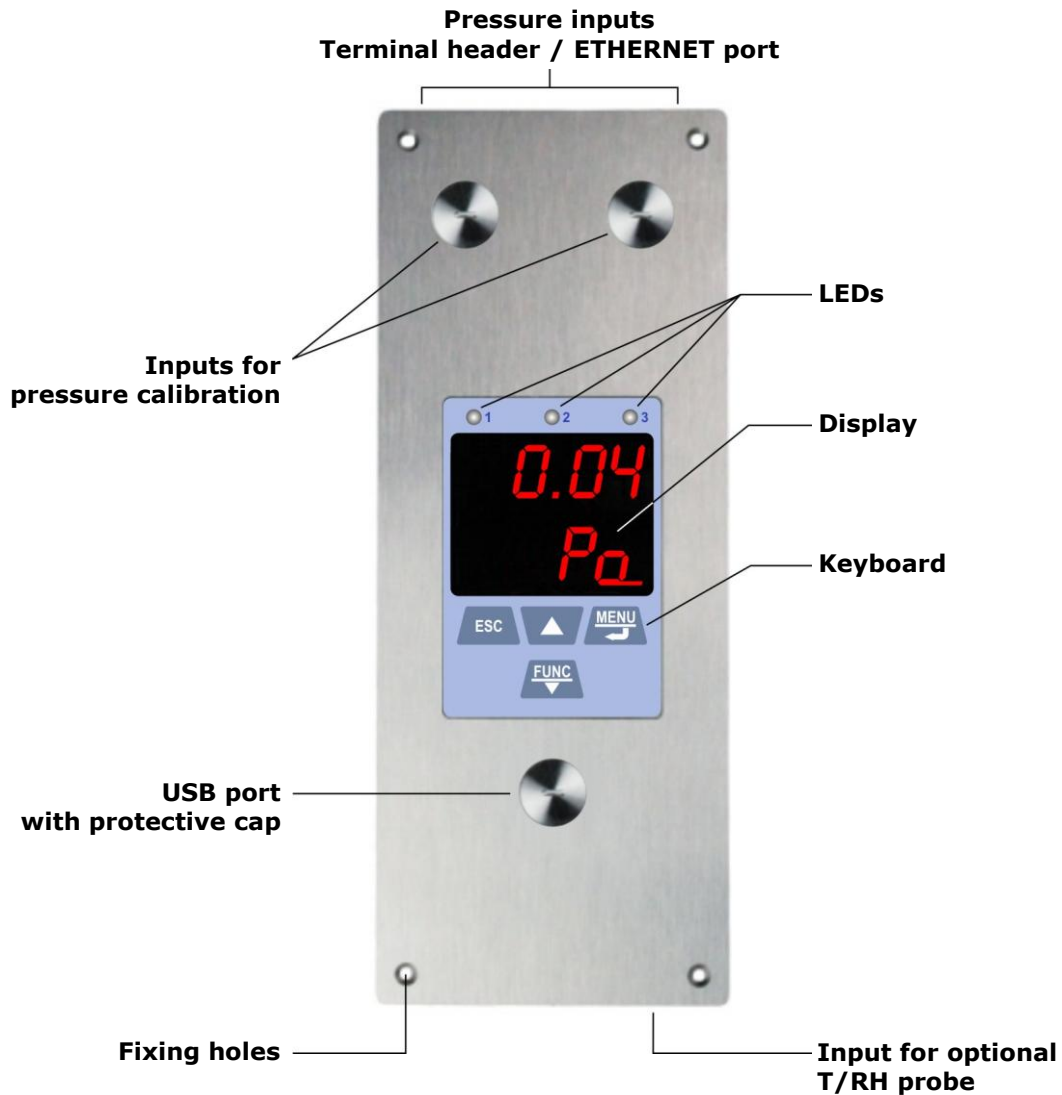

#### Buttons:



Scrolls the real time measurement on the display.  
In menu, increases the displayed value or move to the next parameter.



Displays the statistical functions (MIN, MAX, AVG).  
In menu, decreases the displayed value or move to the previous parameter.




Enters the menu.  
In menu, confirms the displayed value.




Cancel the operation or goes back to the previous level.


## 4 Installation

Make a 196 x 70 mm cut in the wall, at least 46 mm deep, and 4 holes according to the drilling pattern shown below, then wall mount the instrument by using the 4 holes on the front panel.

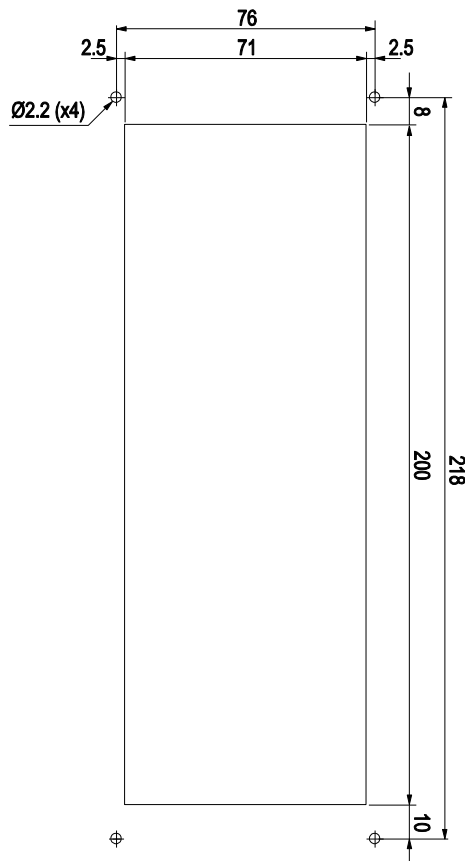

The connections on the upper part of the housing are as follows:

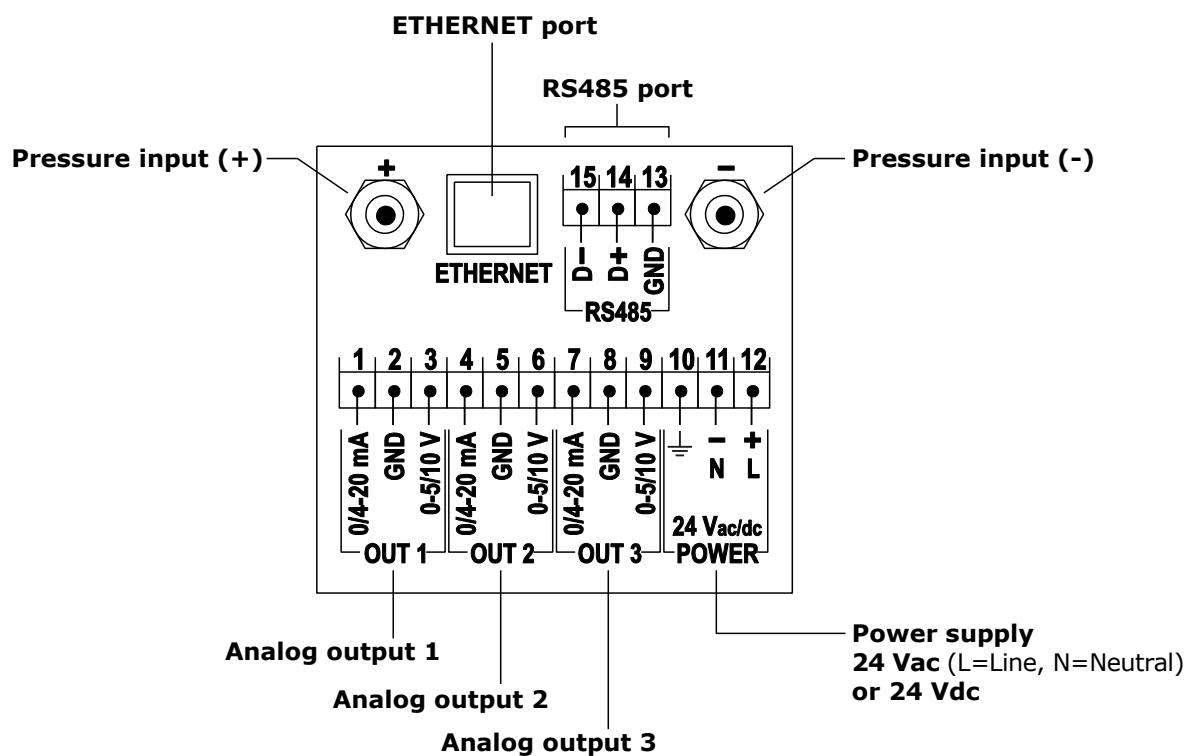

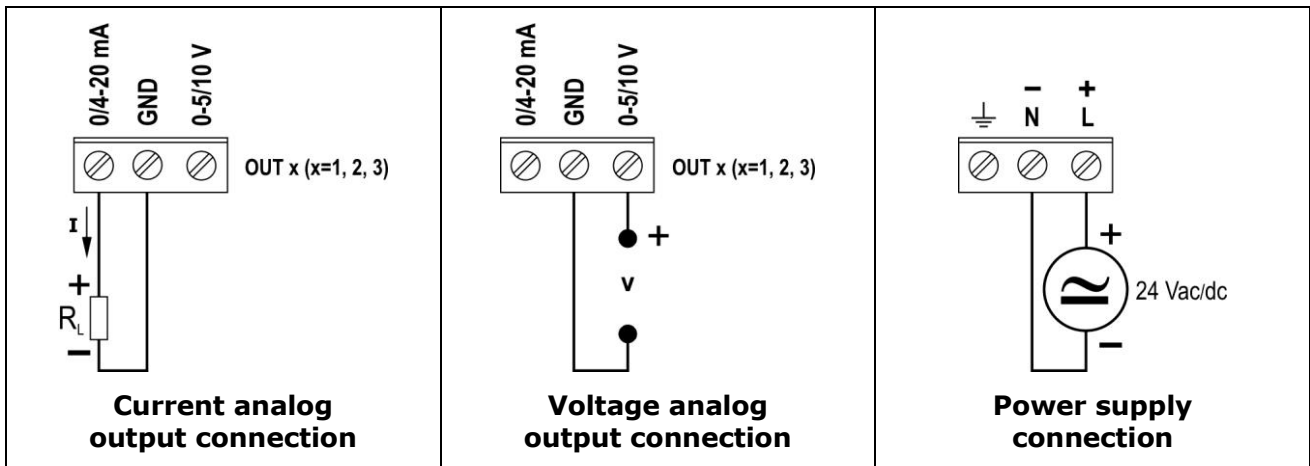


Current outputs max. load  $500\ \Omega$ ; voltage outputs min. load  $10\ k\Omega$ .


The three analog outputs are associated with the first three quantities of the list of selected quantities in the *CHANNELS* panel of the "web server" (see chapter 9) or, equivalently, with the quantities of index CH1, CH2 and CH3 set in the F200 menu via the front keyboard of the instrument (see chapter 10).

The current analog output and the voltage analog output of the same channel (1, 2 or 3) are associated with the same quantity.

The RS485 connection is shown below.

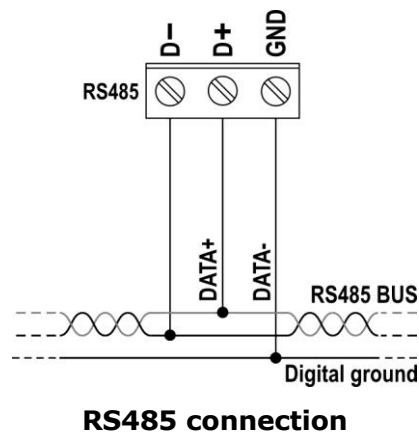

Connect any combined temperature and relative humidity probe to the 8-pole M12 connector on the bottom of the housing.

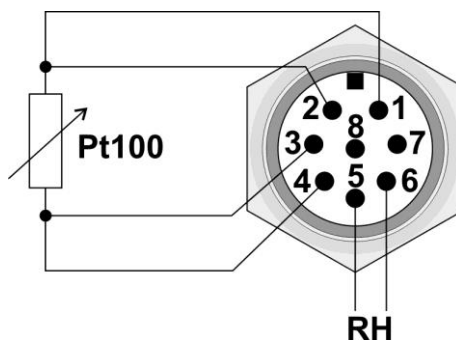

## 4.1 Configuration

The operating parameters of the instrument can be configured in various way:

- Via front keyboard (see chapter 10).
- Via the web server feature of the instrument (see chapter 9).
- Via the HD35AP-S application software, downloadable from the website, connecting the instrument to the PC via USB or local network.
- Via the HDServer1 application software (only for some basic parameters: alarms, logging interval, user code, ...), downloadable from the website, connecting the instrument to the PC via local network.
- Via the Modbus protocol and the RS485 connection, for the Modbus-RTU protocol, or Ethernet connection, for the Modbus TCP/IP protocol (see chapter 11).

For the use of the application software, see the relevant instructions.

## 4.2 Integration coefficient of the differential pressure measurement

The fast response time of the differential pressure sensor can cause the measurement to appear unstable if the measurement environment is subject to instability. In this situation, instead of providing an instantaneous measurement, the instrument can provide an averaged value by setting an integration coefficient **K** to make the measurement more stable.

The averaged pressure value **P<sub>n</sub>** provided is calculated according to the following formula:

$$P_n = \{[(10 - K) \times P_{inst}] + (K \times P_{n-1})\} / 10$$

With:

**P<sub>inst</sub>** = instantaneous pressure value measured

**P<sub>n-1</sub>** = previous averaged pressure value

The higher the K coefficient, which can be set from 0 to 9, the greater the response time to pressure variations and the greater the stability of the measurement.

If K=0 (default), the value provided is the instantaneous value.

If K=1, the formula is applied only if  $|P_{inst} - P_{n-1}| \leq 10,0$  Pa, otherwise the instantaneous value **P<sub>inst</sub>** is provided to speed up the instrument response time.

If K>1, the formula is always applied.

The integration coefficient can be set via the instrument menu (**Fb08**) or with the Holding Register with address **10098** of the Modbus-RTU protocol.

### Calculation example:

- Instantaneous pressure value measured **P<sub>inst</sub>** = 75.0 Pa
- Previous averaged pressure value **P<sub>n-1</sub>** = 70.0 Pa
- Integration coefficient **K** = 3

Current averaged pressure value:

$$P_n = \{[(10 - 3) \times 75.0] + (3 \times 70.0)\} / 10 = 73.5 \text{ Pa}$$

## 5 Connection to local network

To connect the instrument to an Ethernet network, connect the RJ45 connector of the instrument to a socket of the local network via a standard Ethernet cable.

The instrument is preset to get a dynamic IP address from the network DHCP server. A static IP address can be set by using the web server feature of the instrument or the HD35AP-S application software. The IP address is displayed at the end of the list of quantities that can be scrolled by using the “up arrow” key.

The instrument can be accessed from any PC of the local network. To download the data in a database, the **HD35AP-S** (it allows connecting one instrument at a time) or **HDServer1** (it allows connecting several instruments simultaneously) application software and the **MySQL** database management system (included in the HD35AP-S software package) must be installed.

Thanks to the availability of two TCP/IP listening ports, each of which can operate with proprietary (for the connection with HD35AP-S software) or **MODBUS TCP/IP** protocol, and ten sockets (in total, to be divided between the two ports), the instrument allows the simultaneous operation of two communication protocols (proprietary and Modbus TCP/IP) and manages up to **10 “TCP/IP Client”** simultaneously. The default setting of the ports is the following:

- Port number = 5100 for proprietary protocol (8 sockets)
- Port number = 502 for Modbus TCP/IP protocol (2 sockets)

If the local network is connected to Internet, the data can be regularly sent to an **FTP** address, to the **Cloud** and via **e-mail** (as attachments).

*Note:* if the communication with the Cloud or the HDServer1 software is used, the maximum number of “clients” with proprietary or **MODBUS TCP/IP** protocol is nine.

To configure the TCP/IP ports and the sending of data over the Internet, use the web server feature of the instrument or the HD35AP-S software.

### 5.1 HD35AP-CFR21 software option

The **HD35AP-CFR21** option allows, in addition to the features of the basic software (both HD35AP-S and HDServer1), the protection of recorded data and instrument configuration in response to **FDA 21 CFR part 11** recommendations. In particular, become available:

- The traceability of activities (Audit Trail) performed with the software; for example, which users connected and what changes were possibly made to the configuration of the instrument.
- The management of users access for the instrument configuration and viewing of data in the database. Each user can be assigned a different password for using the software. There are also three levels of access (Administrator, Super-user and standard User); for each level, the allowed operations can be defined.

The HD35AP-CFR21 option works with USB hardware key to be connected to any PC connected to the same local network of the PC in which the basic software is installed.

*Note:* if the HD35AP-CFR21 option is used, the instrument integrated web server allows viewing measurements and configuration, but not the modification of the instrument configuration, because the settings changed via web server cannot be traced.

## 6 Alarms


For each detected quantity, two alarm thresholds can be set by the user. The alarm is generated if the measured value falls below the lower threshold or rises above the upper threshold.

Exceeding a threshold is signaled:


- acoustically, by means of the internal buzzer (if enabled);
- visually, by lighting the alarm LEDs on the front panel (only for the three measurements associated with the analog outputs);
- remotely, by sending alarm **e-mails** (if enabled).

An alarm hysteresis and a delay in the generation of the alarm can be configured for each detected quantity.

The amplitude of the hysteresis is in percentage (0...100%) of the difference between the two alarm thresholds. For example, if the hysteresis is 2% (default value), the lower threshold is 10 °C and the upper threshold is 60 °C, the hysteresis in °C is equal to  $(60-10) \times 2/100 = 1$  °C.

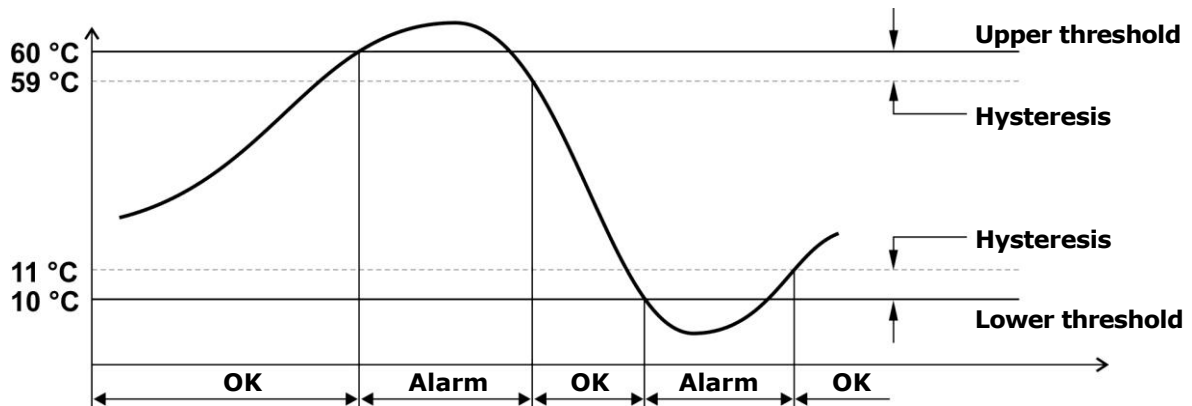

The alarm is generated after the set delay time or immediately if the "no delay" option is selected (default). If the alarm condition disappears before the delay time has elapsed, the alarm is not generated.

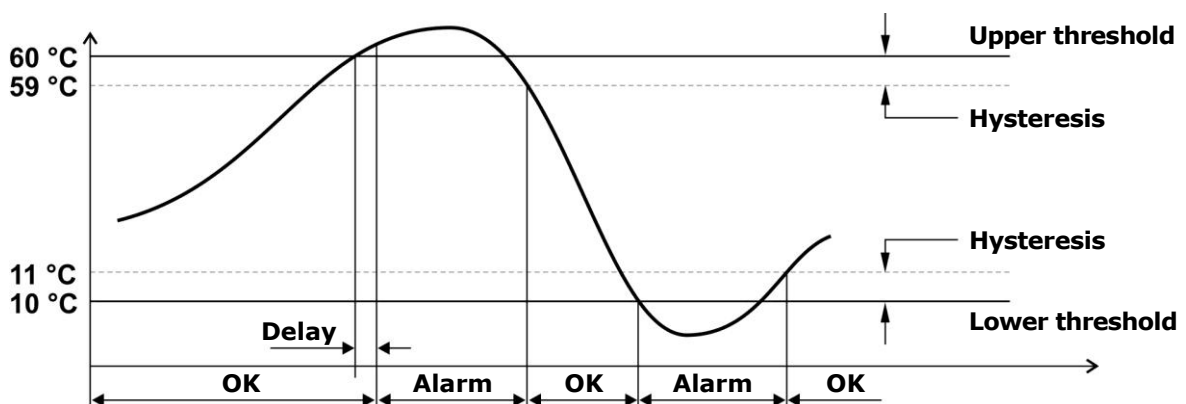


Enabling the Buzzer *Latch* option, the buzzer continues to sound even after the alarm condition has ceased.


In the event of an alarm in progress with the buzzer active, the buzzer can be silenced

for a configurable time. Once the set time has elapsed, the buzzer will resume sounding or not depending on whether the alarm condition is still present or not.

The following example shows the silencing of the buzzer with *Latch* option disabled.

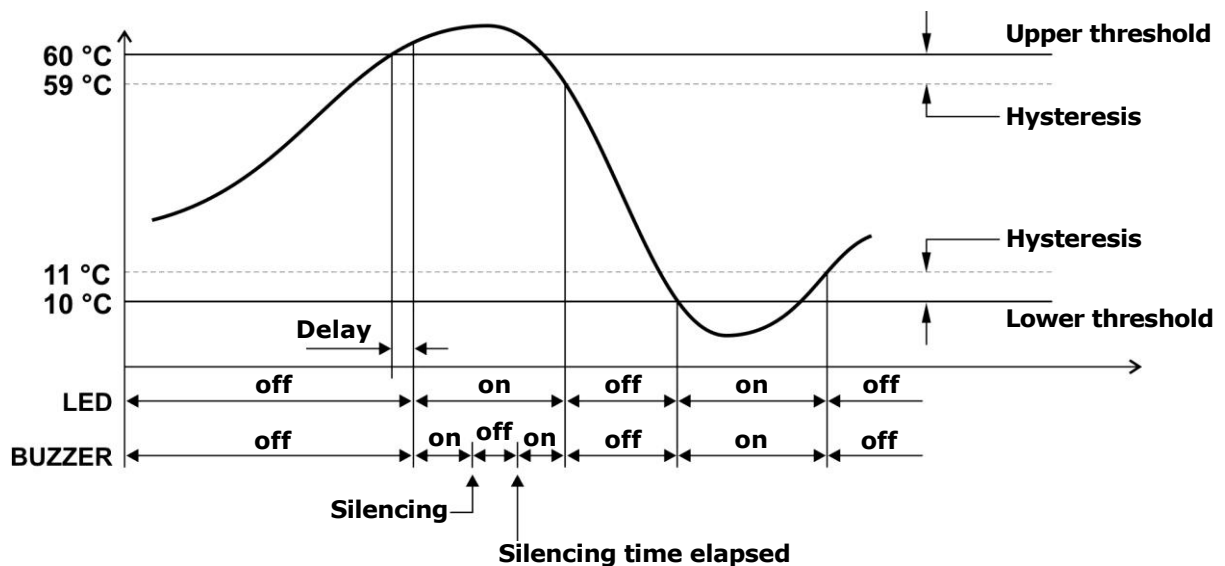

The following example shows the silencing of the buzzer with *Latch* option enabled.

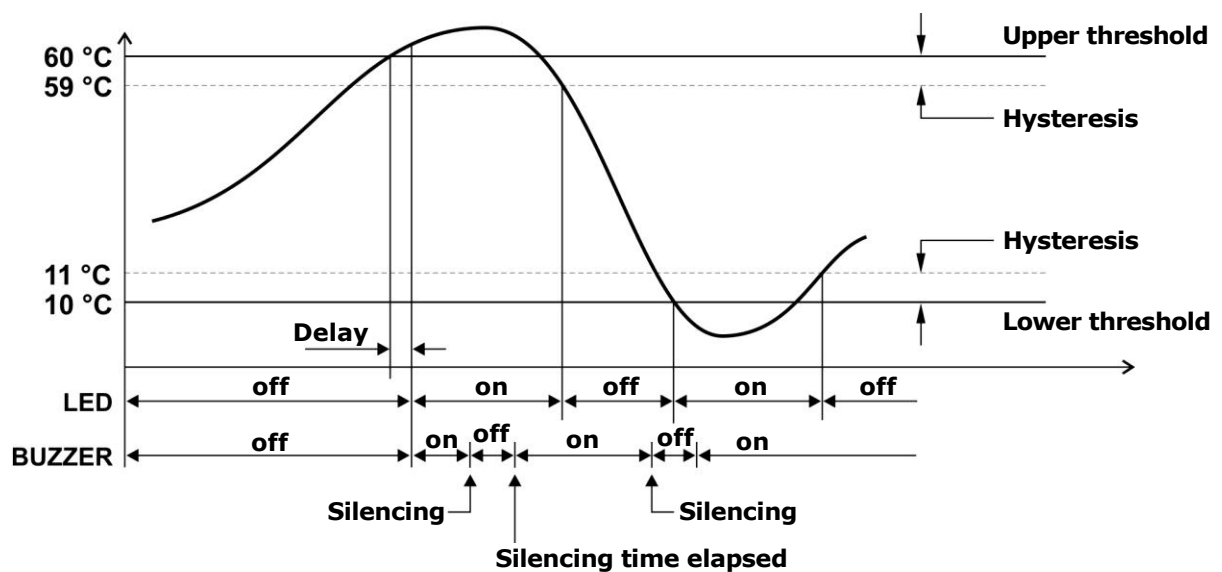

## 7 Statistical functions

The instrument calculates and displays the maximum (MAX), minimum (MIN) and average (AVG) value of the detected measurements.

In order to display the statistical information, press **FUNC/▼**: the instrument shows the maximum value of the displayed quantity. To scroll the maximum values of the various quantities use the **▲** key.


By pressing **FUNC/▼** again, the instrument shows the minimum value of the displayed quantity. By pressing **FUNC/▼** again, the instrument shows the average value of the displayed quantity.

By pressing **FUNC/▼** once more, the instrument asks if the calculation of the statistical values is to be reset (FUNC CLR). Select *YES* or *no* using **▼/▲** keys, then confirm with the **MENU/↵** key.

## 8 Calibration

The instrument calibrates automatically at regular intervals (default 60 minutes, the interval is configurable) the zero of the differential pressure, temporarily disconnecting the pressure inputs through an internal solenoid valve.

Via the Fc00 menu (see chapter 10) it is possible to perform a manual calibration in one or two points. In order to perform manual calibration, it is necessary to unscrew the two front caps that cover the calibration inputs. To perform zero calibration (Fc05 in the menu), leave both inputs open. To perform calibration at non-zero values (gain calibration, Fc08 in the menu), connect the front inputs to a low differential pressure generator.

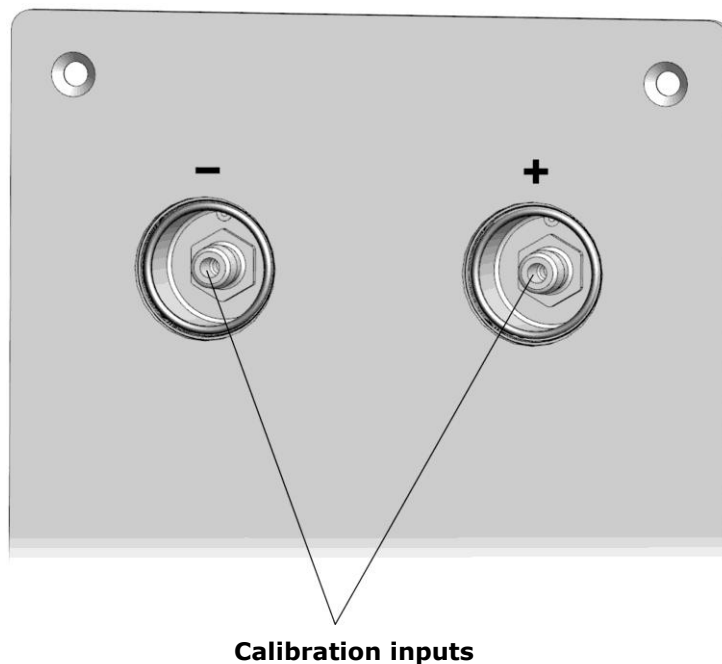

The differential pressure zero calibration is also possible via the Modbus Coil register with address 72 (see chapter 11).

At the end of the calibration or verification, firmly screw the front caps so that the seal is tight and the inputs are not affected by the external pressure.

Via the Fc00 menu it is also possible to calibrate the relative humidity sensor of the combined temperature and relative humidity probe at points 33% RH and 75% RH.

**Warning:** the optional combined relative humidity and temperature probe must be calibrated in line with the instrument. If the probe is ordered with the instrument, the probe is already factory calibrated. If the probe is ordered later, the calibration must be performed by the user via the Fc00 menu.

## 9 Web server

The instrument has an integrated web server through which you can configure the instrument and view the real time measurements from any PC, tablet or smartphone connected to the same local network of the instrument by simply using a web browser.

To connect to the web server, type the IP address of the instrument in the address bar of the web browser of your device (PC, tablet, smartphone, ...).

*Note:* the IP address is displayed at the end of the list of quantities that can be scrolled by using the “up arrow” key.

*Note:* if a port number other than the standard HTTP (80) has been set in the instrument, the port number must be specified after the IP address (*IPaddress:port number*).

In the web server starting window, enter the user name and the password supplied with the instrument, then press *Submit*.

### Structure of the web server menu:

<b>SETTINGS</b>	
INFO	Instrument general information
CONFIGURATION	Modbus parameters, user code and belonging group
MEASURES	Selection of the quantities to be displayed
LOGGING	Logging settings
ALARMS	Setting of the alarms
UNITS	Units of measurement
CHANNELS	Selection of the quantities to be displayed with the Monitor function
OUTPUTS	Setting of the analog outputs
<b>MONITOR</b>	
MEASURES	Display of the real time measurements
CHART	Graphs of the measurements acquired by the Monitor function
SETUP	Settings of the graphs of the measurements
TABLE	Numeric table of the measurements acquired by the Monitor function
<b>CONNECTIVITY</b>	
NETWORK	LAN settings
WIFI	<i>Wi-Fi connection not available in this model</i>
EMAIL	Settings for sending e-mails
FTP	Settings for sending data via FTP
CLOUD	Settings for sending data to the Cloud
SERVER	Settings for the connection with the HDServer1 software
CLOCK	Setting of the automatic clock synchronization
<b>FILES</b>	
LOAD	Import of data files
CHART	Graphs of imported measurements
SETUP	Settings of the graphs of imported measurements
TABLE	Numeric table of imported measurements

## 9.1 SETTINGS menu

The SETTINGS menu allows viewing the instrument general information and configuring the Modbus parameters, the user code, the belonging group, the logging parameters, the alarms and the units of measurement. It also allows choosing the measurements to be stored in the internal memory and displayed in real time (Monitor) and in what order.

### • INFO panel

Displays the general information of the instrument:

- model, serial number
- user code
- belonging group
- Wi-Fi signal level (*not available in this model*)
- behaviour when the internal memory is full (cyclic overwriting or not)
- logging status
- buzzer activation status
- Modbus address, firmware version
- logging interval
- measurement interval
- calibration date




### • CONFIGURATION panel

Setting of Modbus parameters, user code and belonging group (defining a group is useful for identifying subsets of devices, for example the devices installed in the same environment).


In the Modbus section of the panel, the following parameters can be set:

- Modbus address {1...247, default = 1}
- Baud rate {96006 / 19200 / 38400 / 57600 / 115200, default = 19200 bps}
- Parity and stop bits {8N1 / 8N2 / 8E1 / 8E2 / 8O1 / 8O2, default = 8E1}
- Waiting time after transmission {Immediate Reception = violate protocol and go in receiving mode right after transmission / Wait 3.5 char = respect protocol and wait 3.5 characters after transmission, default = Immediate Reception}
- Enabling of the password for changing the configuration via Modbus {Enable/Disable, default = Disable}

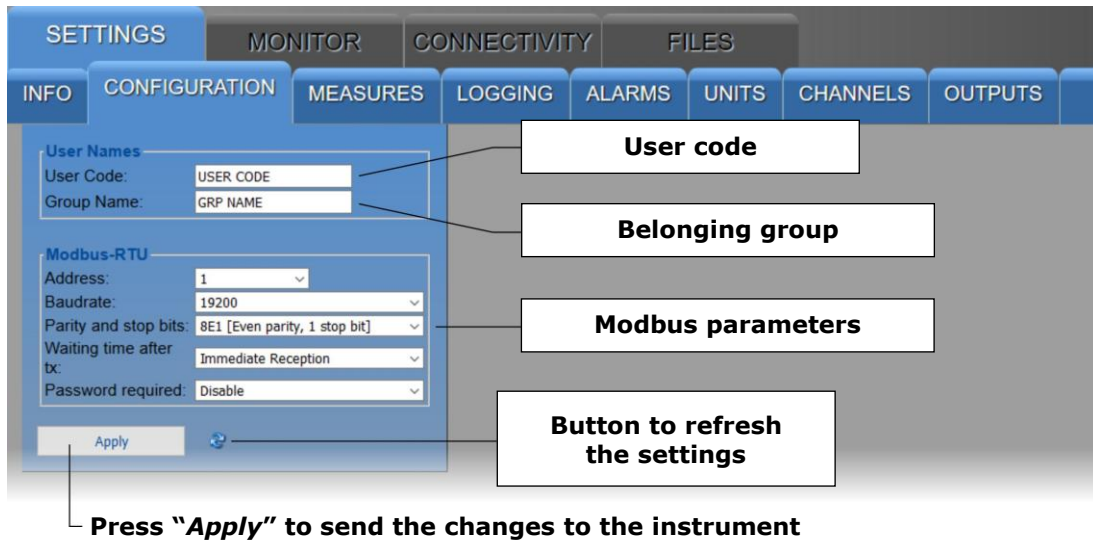

### • MEASURES panel


Selection of the quantities to be displayed cyclically on the instrument display. For each quantity, a custom name can be defined. In the panel, the resolution and the unit of measurement of each quantity are also indicated.

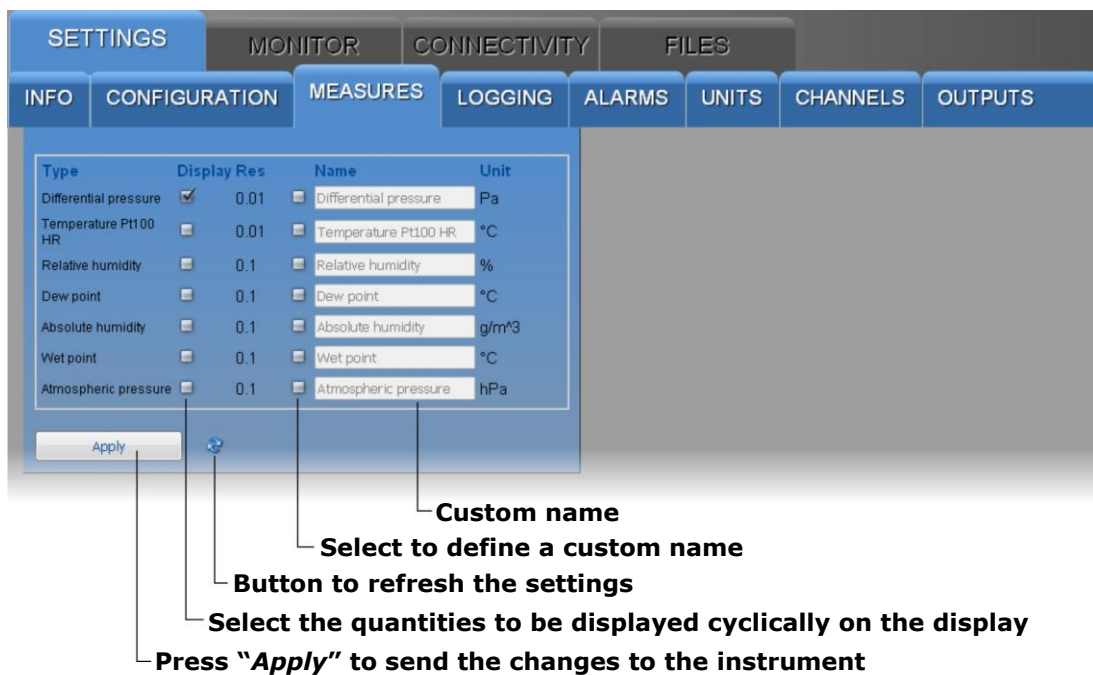

### • LOGGING panel

Setting of:

- Logging interval.
- Measuring interval.
- Logging status (active or not active).
- Memory management mode when it is full (cyclic overwriting or stop logging).

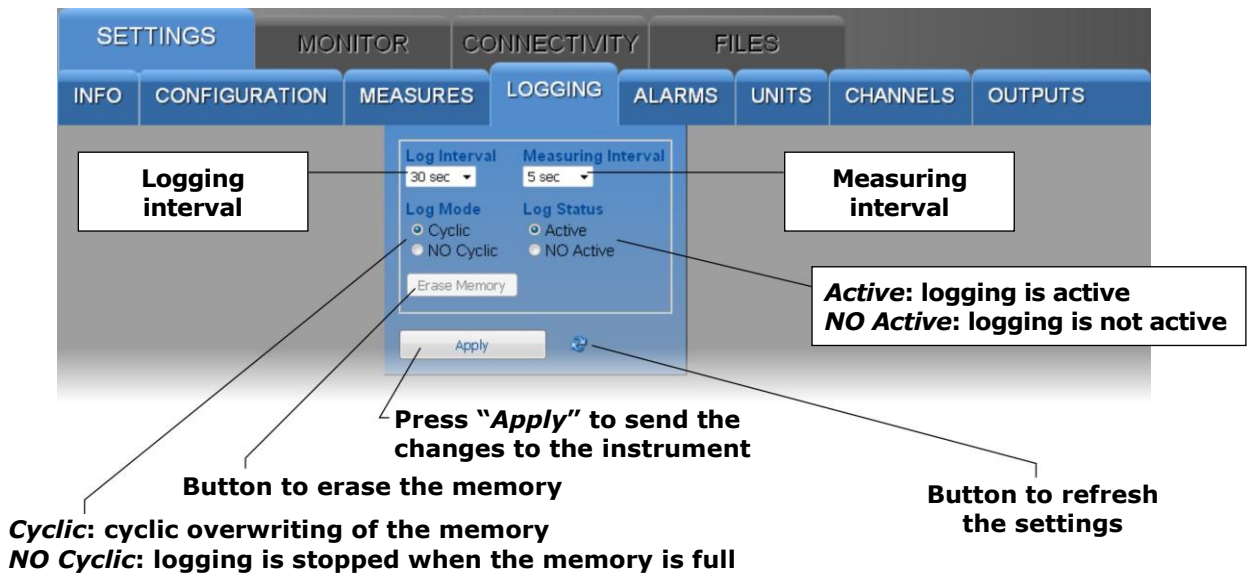


If the logging interval is greater than the measuring interval, the average of the measurements acquired during the logging interval will be stored.

The "Erase Memory" button allows erasing the data in the instrument memory.

## • ALARMS panel


Setting of the alarm thresholds and buzzer operating mode for each of the available quantities. The hysteresis, in percentage of the difference between the two alarm thresholds, and the delay time (set "no delay" for immediate activation in the event of an alarm) of the alarm can be configured.

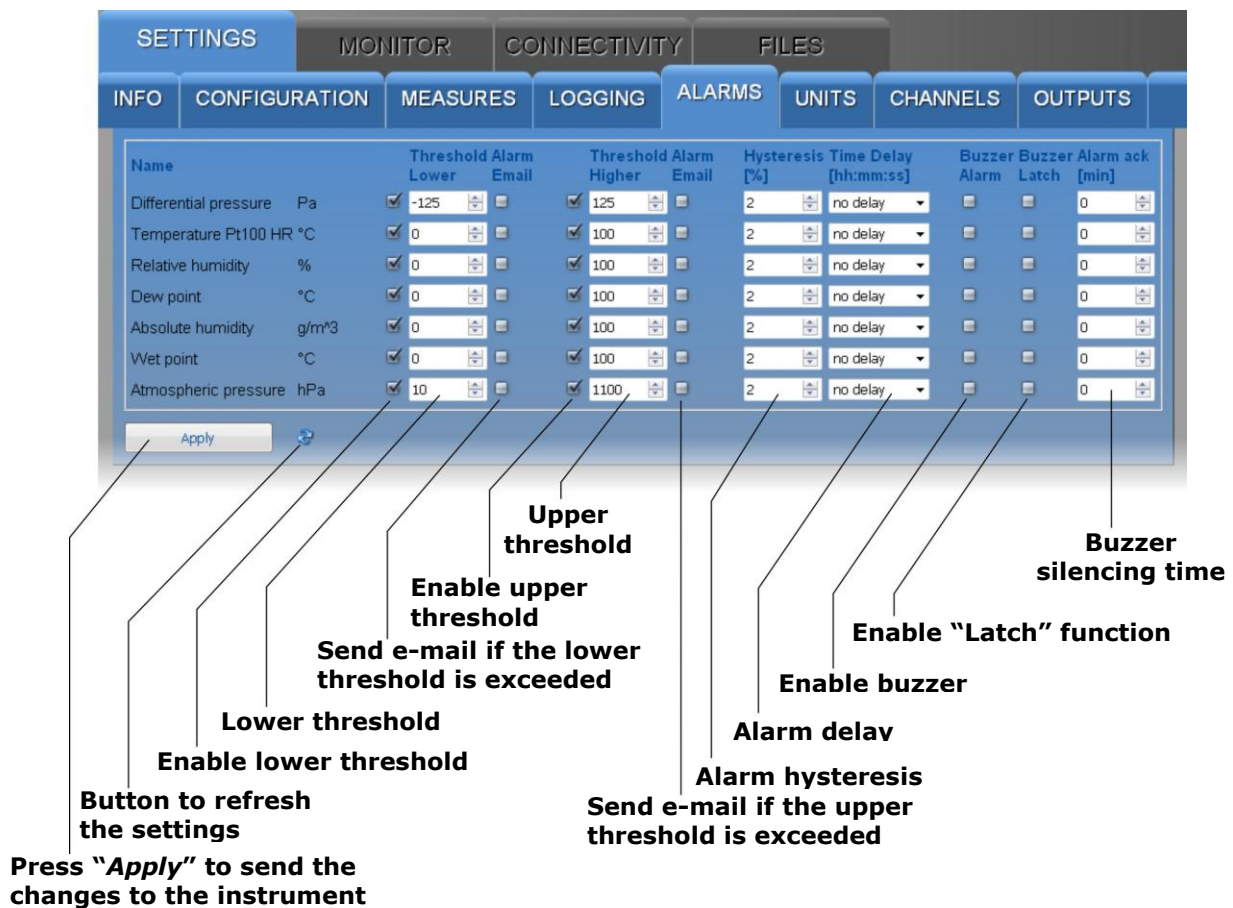

If the *Buzzer Latch* option is enabled, the buzzer continues to sound even after the alarm condition has ceased. The *Alarm ack* field allows silencing the buzzer for the set number of minutes.


### • UNITS panel

Setting of the temperature (°C or °F) and differential pressure (mbar, bar, Pa, hPa, kPa, atm, mmHg, mmH<sub>2</sub>O, inHg, inH<sub>2</sub>O, kgf/cm<sup>2</sup> or PSI) units of measurement.

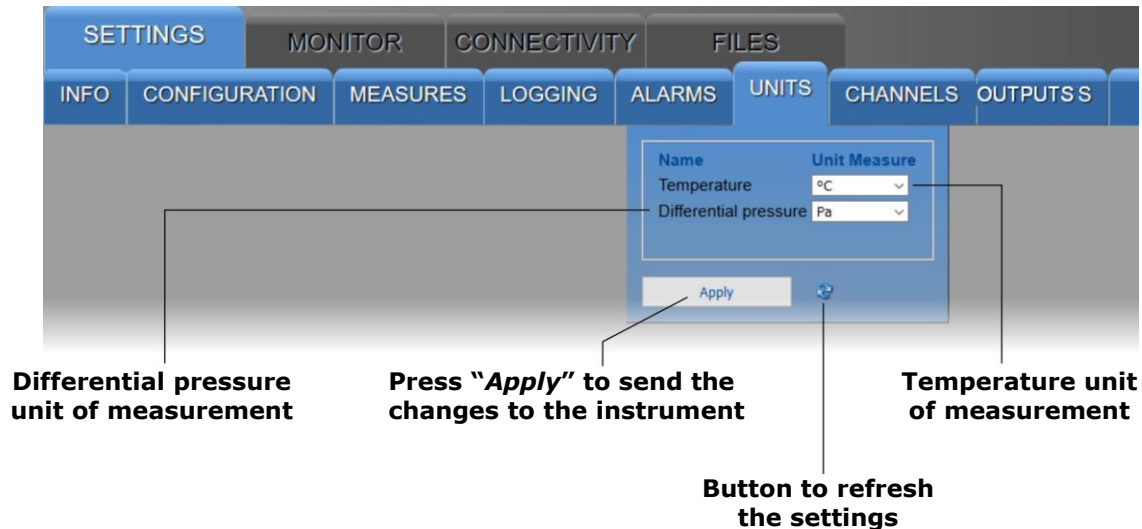

### • CHANNELS panel

Allows choosing the measurements to be stored in the internal memory and displayed in real time with the Monitor function and in what order. The panel has two lists: the quantities available (to the left) and the quantities to be displayed (to the right). The quantities are displayed in the order in which they appear in the list on the right.

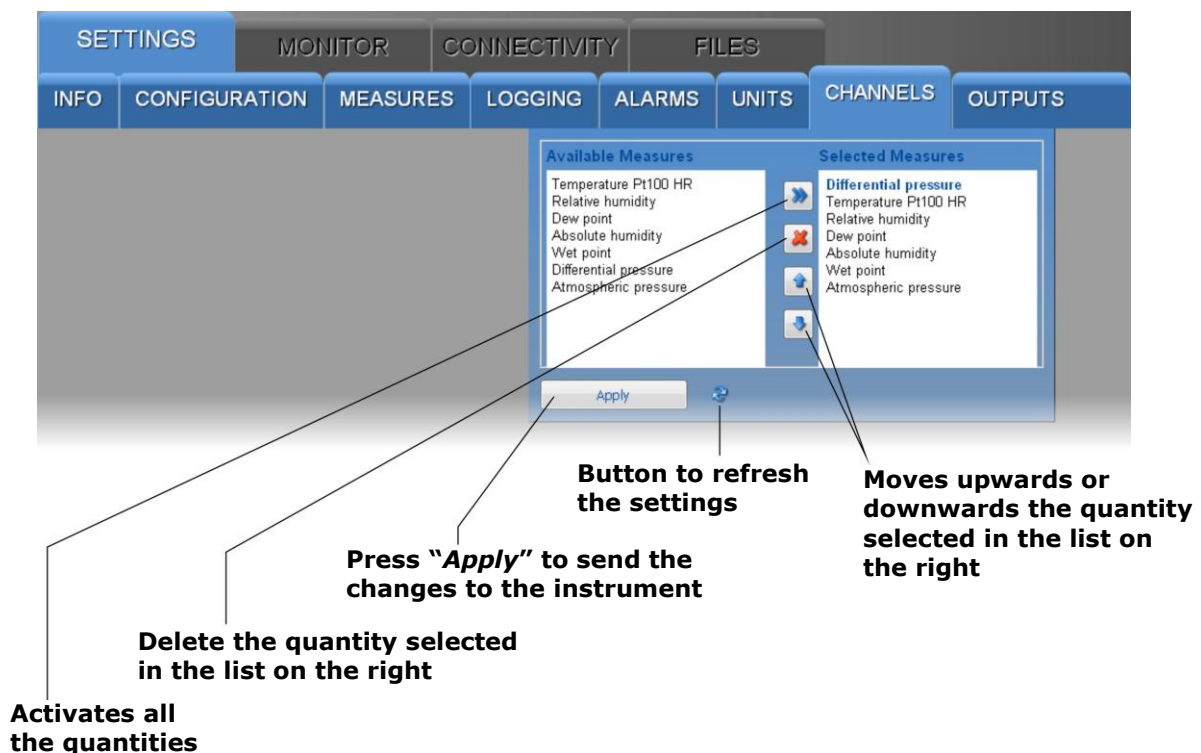

## • OUTPUTS panel

Allows configuring the analog outputs.

The screenshot shows the **OUTPUTS** panel in the HD50CR software. The panel has a tabbed interface with **SETTINGS** selected. Below the tabs, there is a table for configuring three analogue outputs.

Analogue Output	Name	Unit	Low range value	High range value	Current Output	Voltage Output
OUT1	Differential pressure	Pa	-125	125	4-20mA	0-10V
OUT2	Temperature Pt100 HR	°C	0	100	4-20mA	0-10V
OUT3	Relative humidity	%	0	100	4-20mA	0-10V

Below the table is an **Apply** button and a refresh icon.

Callouts from the image:

- Button to refresh the settings**: Points to the refresh icon.
- Press "Apply" to send the changes to the instrument**: Points to the **Apply** button.
- Quantity value corresponding to 20 mA and 5/10 V**: Points to the **High range value** column.
- Quantity value corresponding to 0/4 mA and 0 V**: Points to the **Low range value** column.
- Selection 0-5 V or 0-10 V**: Points to the **Voltage Output** column.
- Selection 0-20 mA or 4-20 mA**: Points to the **Current Output** column.


The three analog outputs are associated with the first three quantities of the list of selected quantities in the *CHANNELS* panel.

## 9.2 MONITOR menu

The MONITOR menu allows viewing the real time measurements, both in graphic and table form. The measurements and the corresponding date/time are updated at intervals equal to the logging interval. The measurements acquired by the Monitor function can be saved in a log file and exported in CSV format.

### • MEASURES panel


Displays the current value of the quantities (only those selected for logging).

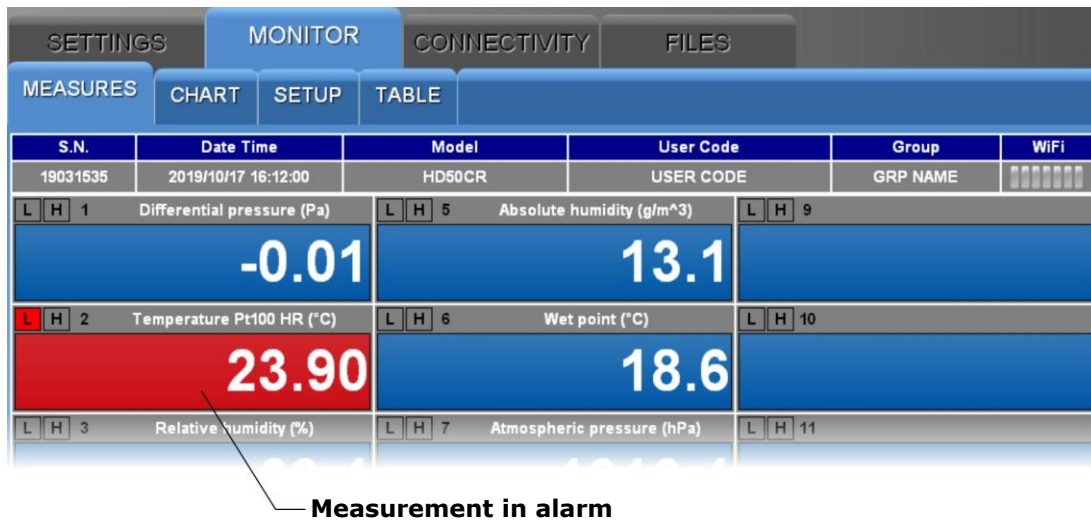


The measurements in alarm are highlighted with a red background. The **L** and **H** symbols indicate whether the lower (L) or higher (H) threshold has been exceeded.

### • CHART panel


Displays the graphs of the measurements acquired by the Monitor function. The quantities can be displayed on the same graph or in separate graphs (see the SETUP panel).

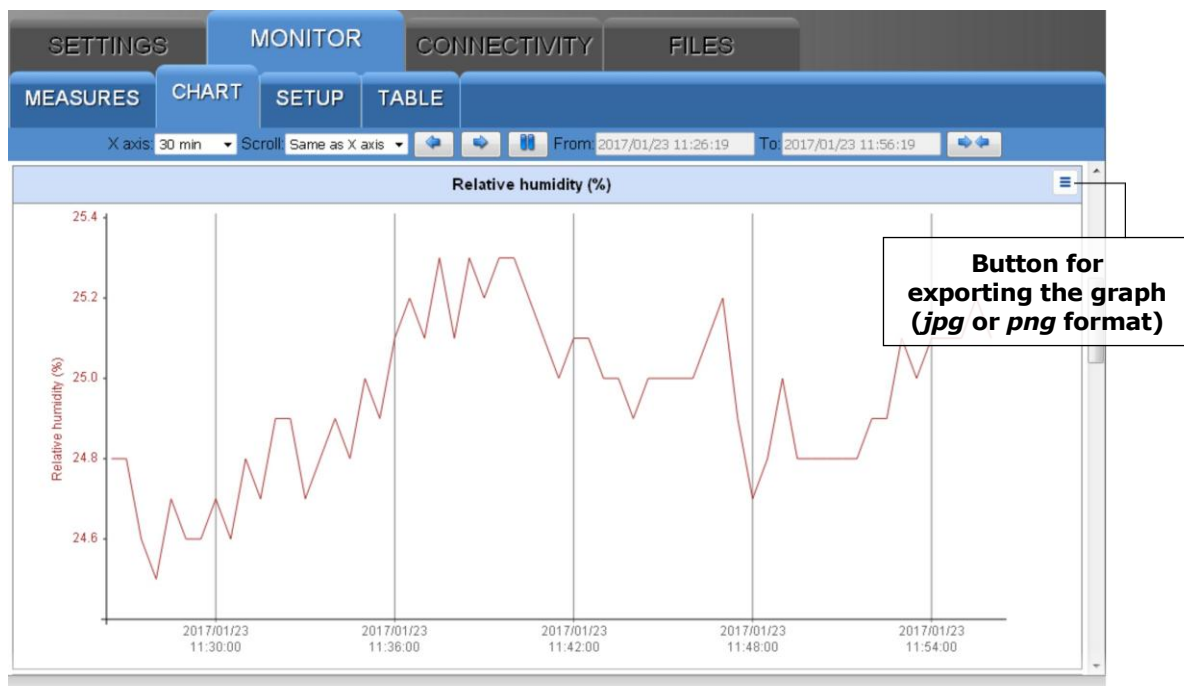

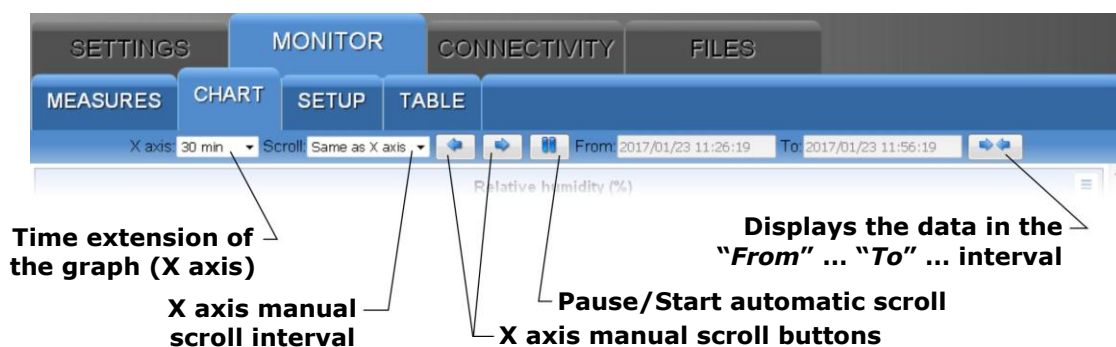


## • SETUP panel

Setting of the quantities and information to be displayed in the graphs.

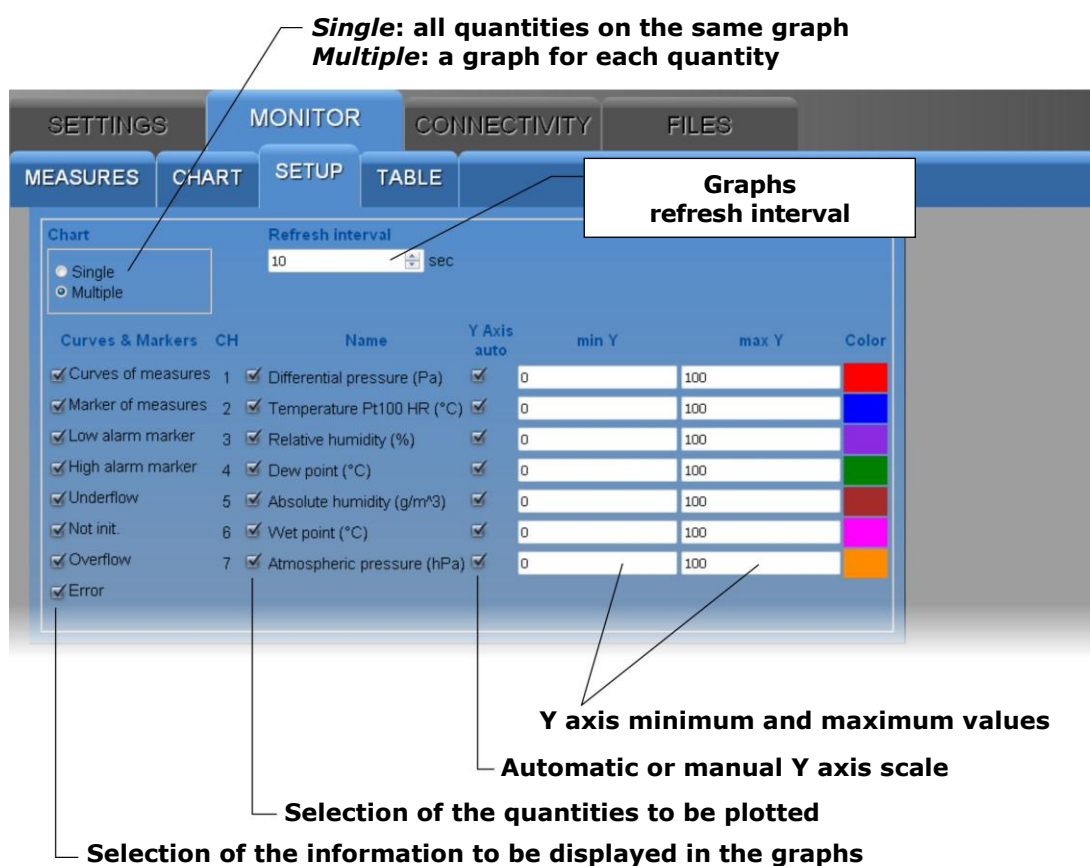

## • TABLE panel

Displays in numerical form the measurements acquired by the Monitor function.

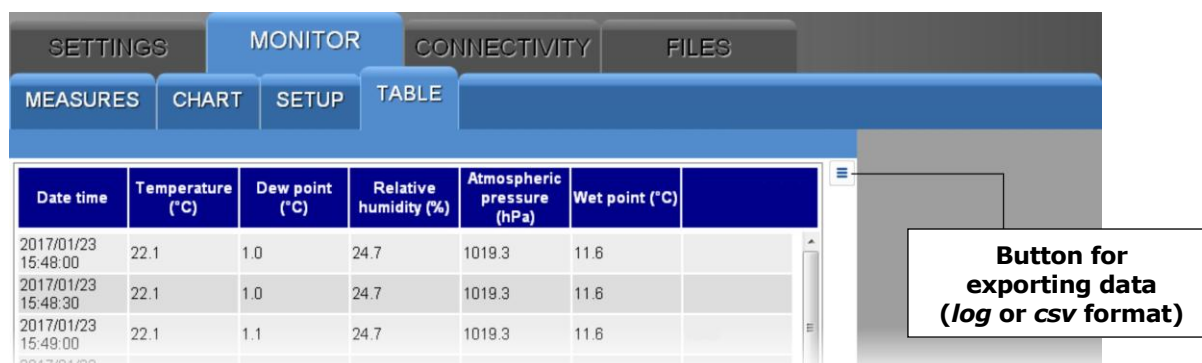


### 9.3 CONNECTIVITY menu

The CONNECTIVITY menu allows configuring the connection to the local network and the sending of data via e-mail, FTP or to the Cloud (if the network has an Internet connection). It also allows setting the automatic clock synchronization and the time zone.

#### • NETWORK panel

Setting of protocols, TCP/IP ports, IP address and DNS server address.

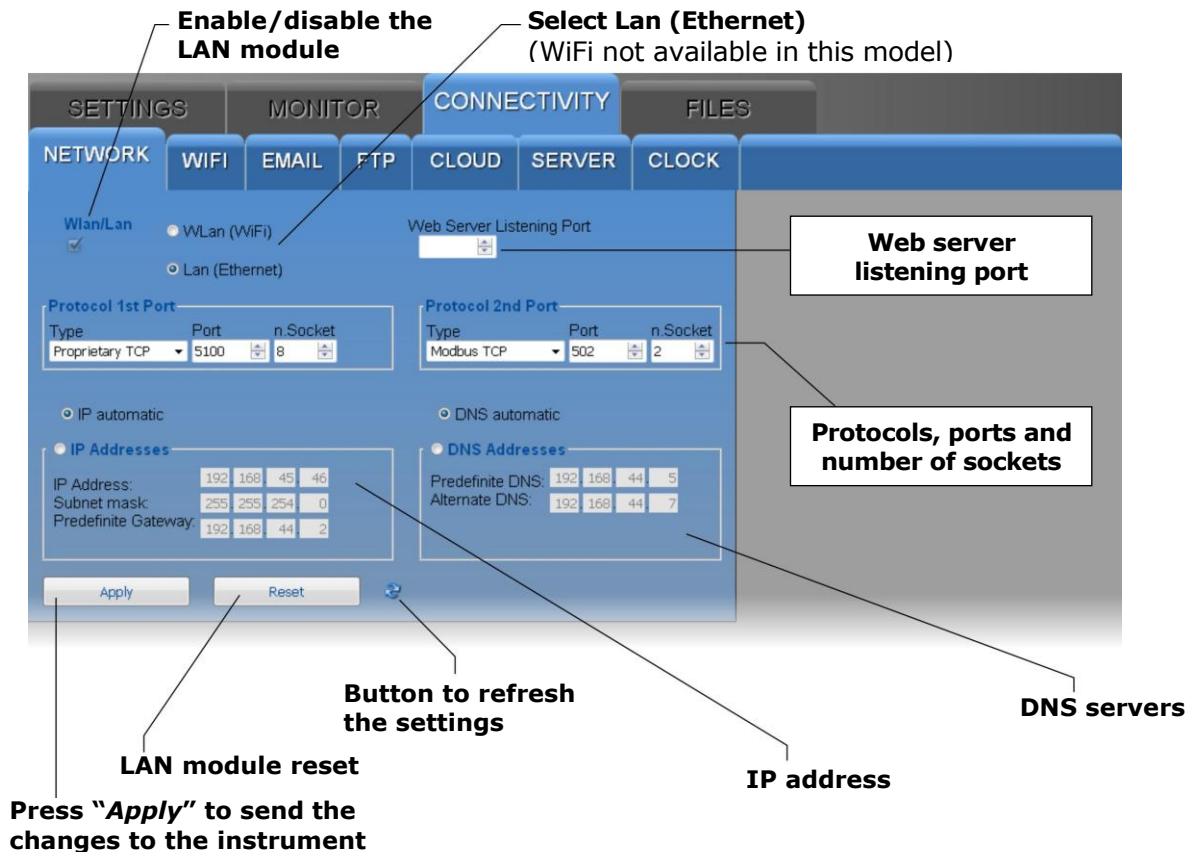

*Note:* if the instrument IP address is changed, the new address must be entered in the web browser to connect to the web server.

If a port number other than the standard HTTP (80) is set as web server listening port, the port number must be specified after the IP address in the web browser. For example, if 40 is set as listening port number of an instrument with IP address 192.168.1.2, in the web browser you need to type 192.168.1.2:40.

The LAN module has two TCP/IP ports. For each of the two ports, set the following:

- the *protocol* : select *Proprietary TCP* (proprietary protocol) or *Modbus TCP*.
- the *port number* : the numbers set by default are 5100 for the proprietary protocol and 502 for the Modbus TCP/IP protocol.
- the *number of sockets* of the port : the number of sockets corresponds to the maximum number of connections that can be active at the same time through the port. In total **there are 10 sockets to be divided between the two ports** (for example, if 8 sockets are assigned to the first port, the second port can have a maximum of 2 sockets).

*Note:* if the communication with the Cloud or the HDServer1 is used, the maximum number of "clients" with proprietary or **Modbus TCP/IP** protocol is nine.

*Note:* actually, the number of Modbus TCP/IP connections that can be active at the

same time is equal to the set number of sockets less one, because a socket is kept free to accept new connection requests (if all the sockets are active, the socket corresponding to the oldest request is released when a new connection is accepted).

**WARNING: if the LAN module configuration is changed, the new settings are not immediately activated, but only after the reset of the module. To immediately activate the new settings, press Reset.**

Enter the IP address manually (**static IP** address) or select “*IP automatic*” to obtain the address automatically (**dynamic IP** address) via DHCP protocol (Dynamic Host Configuration Protocol).

*Note:* it is suggested to use a static IP for the communication with the HD35AP-S software, with a web browser or via Modbus TCP/IP, because the client devices (PC, PLC, ...) do not automatically detect any changes in the IP address of the instrument.

Similarly, select whether to manually enter the addresses of the **DNS** (Domain Name System) **servers** or obtain the server address automatically.

To set the properties in the NETWORK panel you should consult the local network administrator.


### • WIFI panel

Wi-Fi functionality is not available in this model.

### • EMAIL panel

Setting of the e-mail account used to send data and alarms via e-mail, of the e-mail addresses of the recipients and of the e-mail data uploading modes.

The data can be sent automatically at regular intervals or you can manually request the data memorized within a determined interval of time. The data can be uploaded in *LOG* (for entering in the database and displaying with the Monitor function of the web server) and/or *CSV* (for importing in Excel®) format.

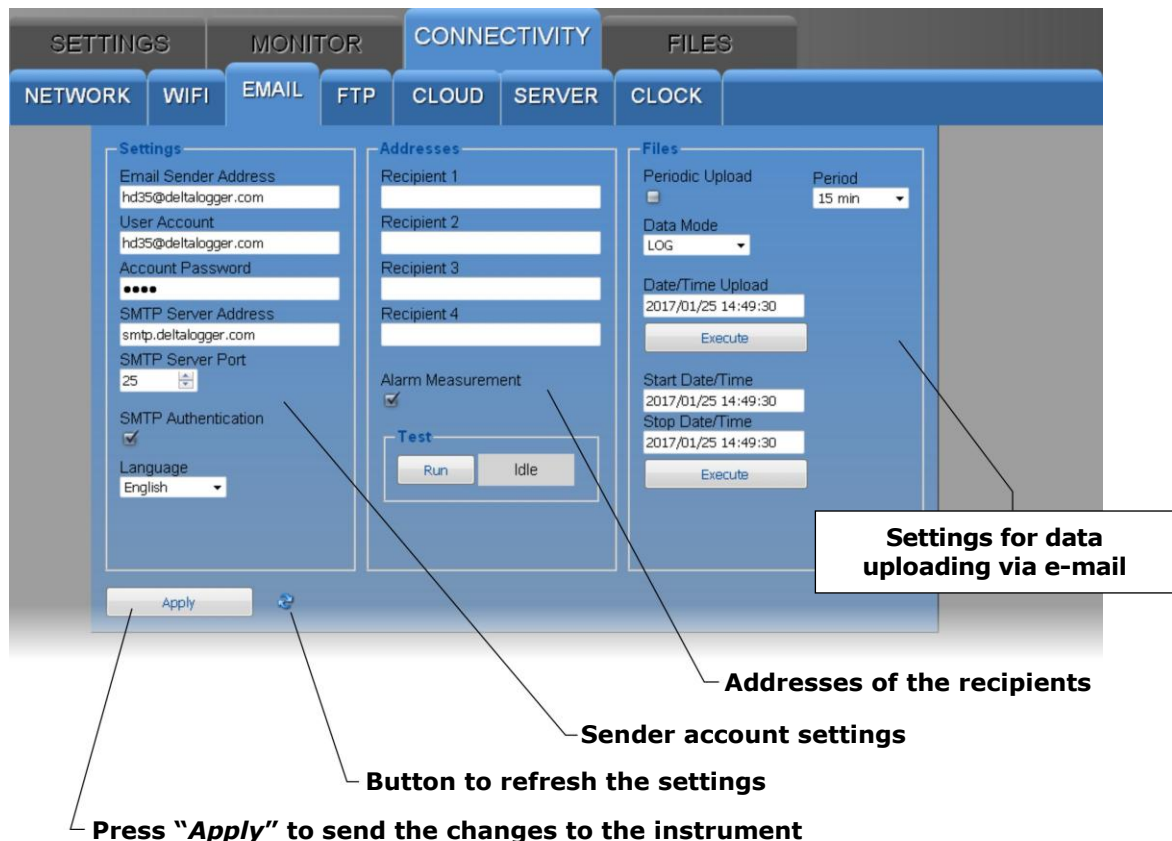

The *Settings* section of the EMAIL panel consists of the following fields:

- *Email Sender Address* : enter the e-mail address of the account that will be used to send the e-mails, that address is what will appear as the sender of the e-mails sent to the recipients.
- *User Account* : enter the user name of the account.
- *Account Password* : enter the password of the account.
- *SMTP Server Address* : enter the outgoing mail server name supplied by your e-mail service provider.
- *SMTP Server Port* : enter the outgoing mail server port number supplied by your e-mail service provider (standard=25).
- *SMTP Authentication* : select the checkbox in order to authenticate e-mails sent.
- *Language* : select the language to be used for sending e-mails.

In the *Addresses* section of the EMAIL panel enter the e-mail addresses of the recipients (*Recipient 1, 2, 3* and *4*). To enable the sending of alarm e-mails, select the *Alarm Measurement* check box. Press the *Run* key to send a test e-mail to the entered recipients; the box next to the *Run* key displays the progress of the test and the final result.

In the *Files* section of the EMAIL panel:

- Select the *Periodic Upload* check box to enable the periodic sending of data via e-mail, then choose the data sending interval in the *Period* field. The available intervals are: 15 min (default), 30 min, 1 hour, 2 hours, 4 hours, 8 hours, 12 hours, 1 day, 2 days, 4 days, 1 week.
- In the *Data Mode* field, select the format of the data sent via e-mail (LOG=format for the database and displaying with the Monitor function of the web server, CSV=format for Excel®).
- To require the sending via e-mail of all the data memorized subsequently to a given instant, indicate the instant in the *Date/Time Upload* field and press *Execute*.
- To require the sending via e-mail of all data memorized in a determined interval of time, indicate the interval starting instant in the *Start Date/Time* field and the interval ending instant in the *Stop Date/Time* field, then press *Execute*.


**Note: sending e-mail and Modbus TCP/IP communication are mutually exclusive activities. The e-mails are not sent if a Modbus TCP/IP communication is active.**

**Note: only SMTP protocol is supported and not SMTPs (SMTP over SSL/TLS).**

### • FTP panel

Setting of the FTP server and of the FTP data uploading modes.

The data can be sent automatically at regular intervals or you can manually request the data memorized within a determined interval of time. The data can be uploaded in LOG (for entering in the database and displaying with the Monitor function of the web server) and/or CSV (for importing in Excel®) format.

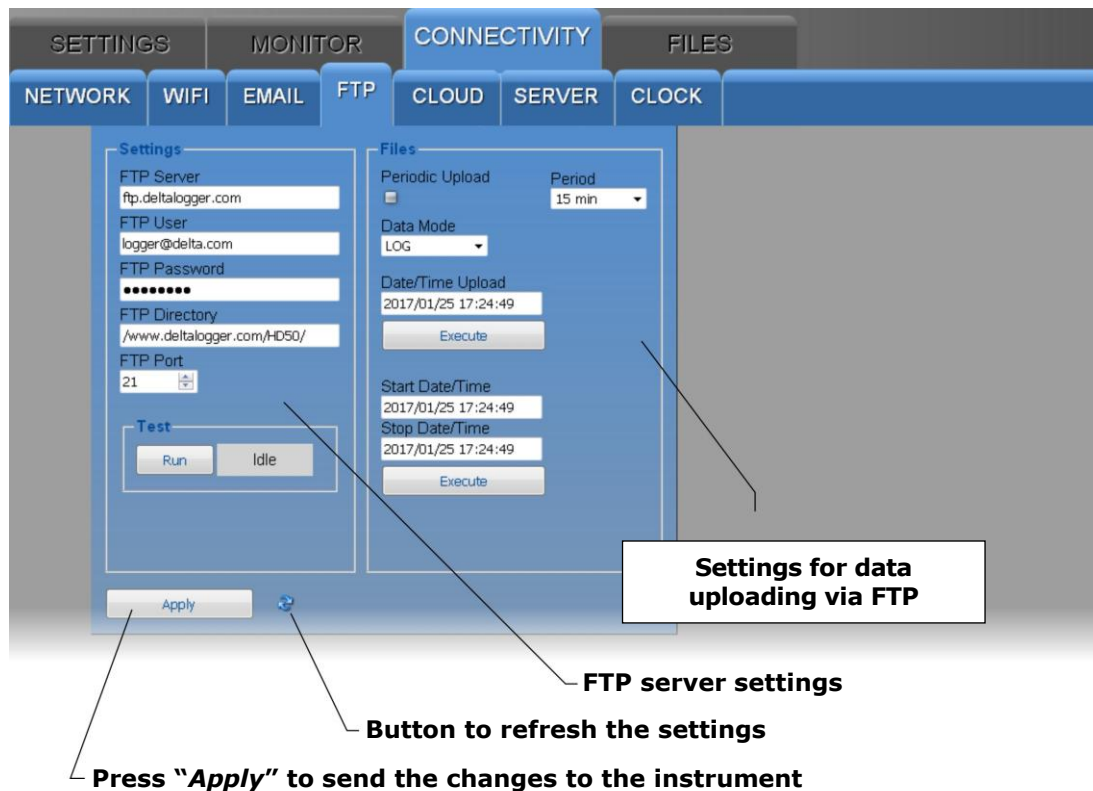

The *Settings* section of the FTP panel consists of the following fields:

- *FTP Server* : enter the FTP server name supplied by the service provider.
- *FTP User* : enter the user name to access the FTP service.
- *FTP Password* : enter the password for the FTP service.
- *FTP Directory* : enter the path of the folder in the FTP server where the files coming from the instrument will be transferred.
- *FTP Port* : enter the FTP server port number supplied by the service provider (standard=21).

Press the *Run* key to send a test file via FTP; the box next to the *Run* key displays the progress of the test and the final result.


In the *Files* section of the FTP panel:

- Select the *Periodic Upload* check box to enable the periodic sending of data via FTP, then choose the data sending interval in the *Period* field. The available options are: Real Time, 15 min (default), 30 min, 1 hour, 2 hours, 4 hours, 8 hours, 12 hours, 1 day, 2 days, 4 days, 1 week.
- In the *Data Mode* field, select the format of the data sent via FTP (LOG=format for the database and displaying with the Monitor function of the web server, CSV=format for Excel®).
- To require the sending via FTP of all the data memorized subsequently to a given instant, indicate the instant in the *Date/Time Upload* field and press *Execute*.
- To require the sending via FTP of all data memorized in a determined interval of time, indicate the interval starting instant in the *Start Date/Time* field and the interval ending instant in the *Stop Date/Time* field, then press *Execute*.

## • CLOUD panel

Setting of the Cloud and of the Cloud data uploading modes.

The data can be uploaded to the Cloud automatically at regular intervals or you can manually request the data memorized within a determined interval of time. The data are sent using the Senseca Cloud protocol.

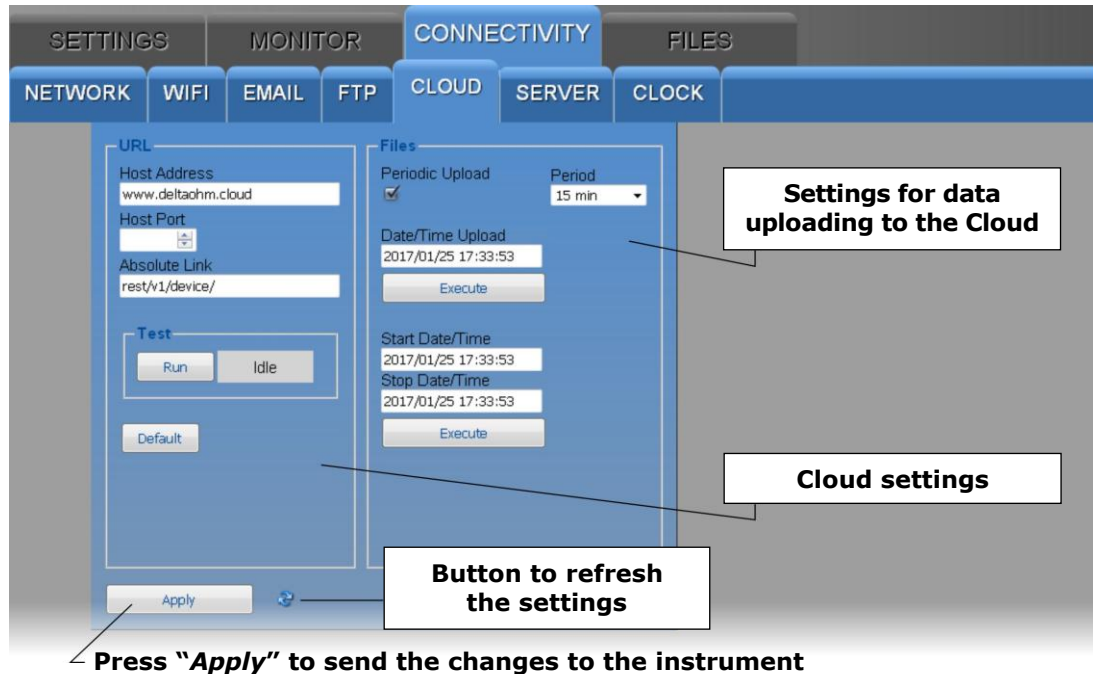

The *URL* section of the CLOUD panel consists of the following fields:

- *Host Address* : enter the Cloud name supplied by the service provider.
- *Host Port* : enter the server port number supplied by the service provider (if the standard HTTP port 80 is used, it is not necessary to indicate it).
- *Absolute Link* : enter the path in the server where the data coming from the instrument will be uploaded.

Press the *Run* key to test the sending of data to the Cloud; the box next to the *Run* key displays the progress of the test and the final result.

The *Default* key restores the factory settings for the Cloud.


In the *Files* section of the CLOUD panel:

- Select the *Periodic Upload* check box to enable the periodic sending of data to the Cloud, then choose the data sending interval in the *Period* field. The available options are: Real Time, 15 min (default), 30 min, 1 hour, 2 hours, 4 hours, 8 hours, 12 hours, 1 day, 2 days, 4 days, 1 week.
- To require the sending to the Cloud of all the data memorized subsequently to a given instant, indicate the instant in the *Date/Time Upload* field and press *Execute*.
- To require the sending to the Cloud of all data memorized in a determined interval of time, indicate the interval starting instant in the *Start Date/Time* field and the interval ending instant in the *Stop Date/Time* field, then press *Execute*

## • SERVER panel

Setting of the IP address of the PC in which the server function of the **HDServer1** software is active and to which the data can be sent for storage into the database.

The data can be uploaded to the server automatically at regular intervals or you can manually request the data memorized within a determined interval of time.

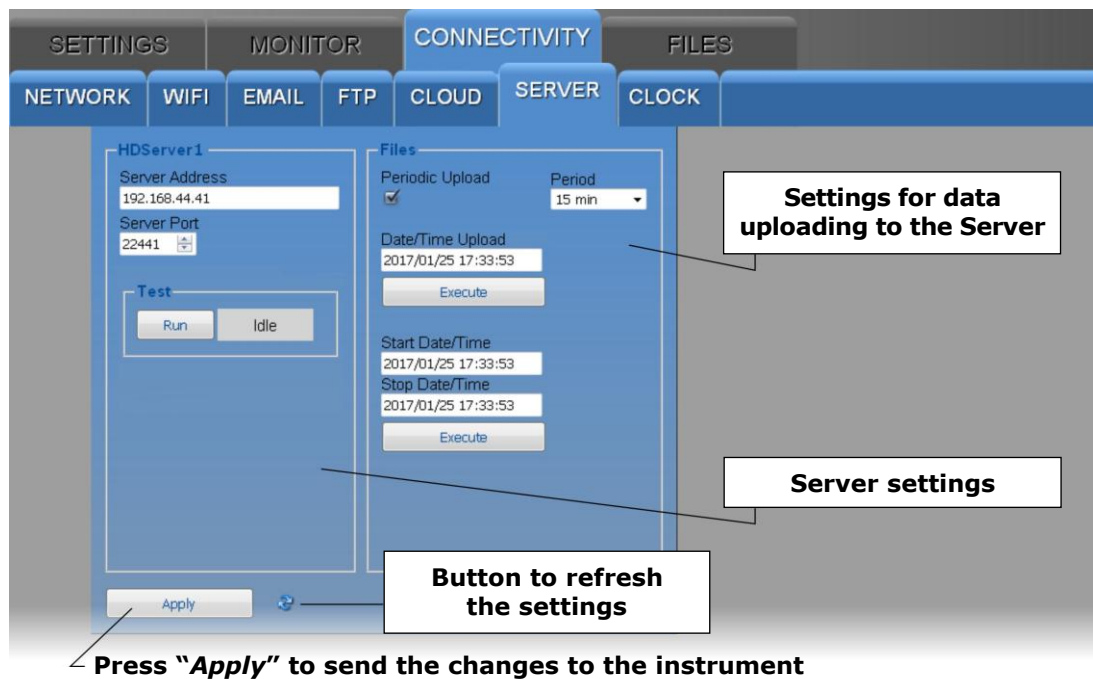

The *HDServer1* section of the SERVER panel consists of the following fields:

- *Server Address* : enter the IP address of the PC in which the server function of the HDServer1 software is active.
- *Server Port* : enter the port number of the PC in which the server function of the HDServer1 software is active.


Press the *Run* key to test the communication with the HDServer1 software; the box next to the *Run* key displays the progress of the test and the final result.

In the *Files* section of the SERVER panel:

- Select the *Periodic Upload* check box to enable the periodic sending of data to the HDServer1 software, then choose the data sending interval in the *Period* field. The available options are: Real Time (default), 15 min, 30 min, 1 hour, 2 hours, 4 hours, 8 hours, 12 hours, 1 day, 2 days, 4 days, 1 week.
- To require the sending to the HDServer1 software of all the data memorized subsequently to a given instant, indicate the instant in the *Date/Time Upload* field and press *Execute*.
- To require the sending to the HDServer1 software of all data memorized in a determined interval of time, indicate the interval starting instant in the *Start Date/Time* field and the interval ending instant in the *Stop Date/Time* field, then press *Execute*

## • CLOCK panel

Setting of clock synchronization and time zone.

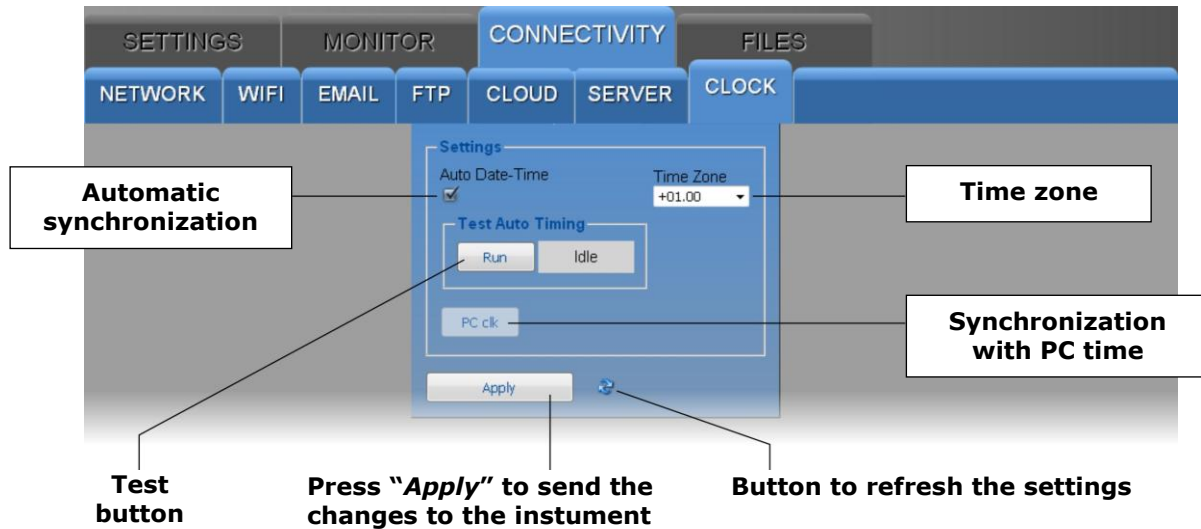

Select the *Auto Date-Time* check box to keep the clock synchronized with a NIST reference server (if the instrument is connected to the local network and the Internet connection is available). Press the *Run* key to check the automatic synchronization; the box next to the *Run* key displays the progress of the test and the final result.

To set the clock with the PC date and time, deselect the *Auto Date-Time* check box and press the *PC clk* key.


If the *Auto Date-Time* check box is unchecked but communication with the HDServer1 software is active, the clock is kept synchronized with the time of the PC in which the HDServer1 software is running.

## 9.4 FILES menu

The FILES menu allows importing and viewing the files with the data sent by the instrument via e-mail and/or FTP, or the data acquired in the past with the MONITOR function of the web server and saved in the PC, tablet or smartphone.

### • LOAD panel

Select the files with the data to be imported.

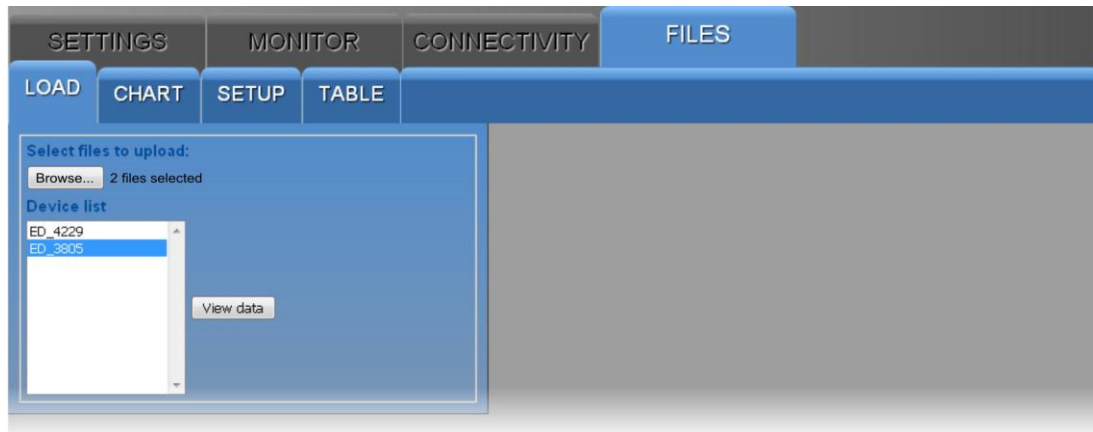

Press the *Browse...* key and select the files to be imported (multiple files can be selected). The instrument corresponding to the imported files appear in the *Device list*: select an instrument and press *View data* to display the data.

### • CHART panel

Displays the graphs of the imported measurements. See the CHART panel of the MONITOR menu.

### • SETUP panel

Setting of the quantities and information to be displayed in the graphs of the imported measurements. See the SETUP panel of the MONITOR menu.

### • TABLE panel

Displays numerically the imported measurements. See the TABLE panel of the MONITOR menu.

## 10 Menu

The menu accessible via the front keyboard allows displaying the instrument information and changing operating parameters. The menu is structured in levels, with main categories and submenus.

To access the menu, you need to enter the **user password** (configurable through the appropriate menu item) or the **administrator password** (supplied with the instrument and not editable). Entering the user password makes some settings not changeable.

The instrument exits automatically the menu if no key is pressed for 3 minutes. After exiting the menu, the password remains active for a few minutes, during which you may enter the menu again without re-entering the password. It is possible to exit the menu by disabling immediately the password by performing a password level reset in the *Password* menu.

To access a menu parameter, proceed as follows:

1. Press **MENU**, the first digit of the password will blink.
2. Using ▼/▲ keys, set the first digit and confirm (**MENU/↵** key), the second digit of the password will blink. Set the remaining digits in the same way.
3. Using ▼/▲ keys, select a main category in the menu and confirm (**MENU/↵** key).
4. If the selected main category has a submenu, select the desired item using ▼/▲ keys and confirm (**MENU/↵** key).
5. Using ▼/▲ keys, select the desired parameter: the parameter current setting is displayed.
6. To change the selected parameter, if allowed, press **MENU/↵**, the parameter setting blinks. Use ▼/▲ keys to change the setting, then confirm (**MENU/↵** key). You can fast forward by keeping ▼ or ▲ key depressed.

To exit the main menu or a sub menu, press ESC key.

If it is not allowed to change a parameter, the notice N/A (Not Available) will appear when trying to change it.

### Menu main category

**F100** (DEV INFO): instrument general information

**F200** (MEAS MENU): selection of the quantities to be detected

**F300** (DISP LOOP VIEW): selection of the quantities to be displayed cyclically

**F400** (ALRM MENU): setting of the alarms

**F500** (UNIT MEAS MENU): units of measurement

**F600** (LOG MENU): logging settings

**F700** (AN OUT MENU): setting of the analog outputs

**F800** (LAN MENU): LAN settings

**F900** (MODBUS MENU): Modbus settings

**FA00** (CLK MENU): clock settings

**Fb00** (PSW MENU): password settings

**FC00** (CAL MENU): calibration settings

**F100 submenu** (DEV INFO)

Instrument general information.

- F101:** model
- F102:** serial number
- F103:** user code
- F104:** group name
- F105:** firmware version
- F106:** firmware date
- F107:** factory calibration date
- F108:** user calibration date
- F109:** type of calibration in use (factory or user)
- F110:** external probe serial number

**F200 submenu** (MEAS MENU)

Selection and sorting of the quantities to be detected.

- F201:** temperature measurement index {CH1...CH6, default=CH2}
- F202:** relative humidity measurement index {CH1...CH6, default=CH3}
- F203:** Dew Point measurement index {CH1...CH6, default=CH4}
- F204:** Absolute humidity measurement index {CH1...CH6, default=CH5}
- F205:** Wet bulb temperature measurement index {CH1...CH6, default=CH6}
- F206:** differential pressure measurement index {CH1...CH6, default=CH1}

Set a measurement to *OFF* to exclude it.

**F300 submenu** (DISP LOOP VIEW)

Selection of the quantities to be displayed cyclically.

*Note:* in the F300 submenu, only the quantities to be detected appear, in the order set in the F200 submenu.

- F301:** quantity of index 1 {On/OFF, default=On}
- F302:** quantity of index 2 {On/OFF, default=On}
- F303:** quantity of index 3 {On/OFF, default=On}
- F304:** quantity of index 4 {On/OFF, default=On}
- F305:** quantity of index 5 {On/OFF, default=On}
- F306:** quantity of index 6 {On/OFF, default=On}

Set a measurement to *OFF* to exclude it from the cyclical display.

**F400 submenu** (ALRM MENU)

Setting of the alarms.

*Note:* in the F400 submenu, the quantities appear in the order set in the F200 submenu.

- F408:** period, in seconds, of the beep emitted by the buzzer {1...3600, default=2}
- F409:** duration, in seconds, of the beep emitted by the buzzer {0.1...20, default=1.0}
- F410: alarm of the quantity of index 1**
  - F411:** lower alarm threshold

**F412:** lower alarm threshold enabling {On/OFF, default=On}

**F413:** upper alarm threshold

**F414:** upper alarm threshold enabling {On/OFF, default=On}

**F415:** alarm hysteresis in % of the difference between the two alarm thresholds {0...100 %, default=2%}

**F416:** delay time in signaling the alarm {max. 960 min, default=0}

**F417:** buzzer enabling {On/OFF, default=OFF}

**F418:** buzzer "Latch" function enabling {On/OFF, default=OFF}

**F419:** buzzer silencing time, in minutes {0...1080, default=0}

.  
.  
.

#### **F460: alarm of the quantity of index 6**

**F461:** lower alarm threshold

**F462:** lower alarm threshold enabling {On/OFF, default=On}

**F463:** upper alarm threshold

**F464:** upper alarm threshold enabling {On/OFF, default=On}

**F465:** alarm hysteresis in % of the difference between the two alarm thresholds {0...100 %, default=2%}

**F466:** delay time in signaling the alarm {max. 960 min, default=0}

**F467:** buzzer enabling {On/OFF, default=OFF}

**F468:** buzzer "Latch" function enabling {On/OFF, default=OFF}

**F469:** buzzer silencing time, in minutes {0...1080, default=0}

#### **F500 submenu** (UNIT MEAS MENU)

Units of measurement.

**F501:** temperature unit of measurement {°C/°F, default=°C}

**F502:** differential pressure unit of measurement {hPa / kPa / atm / mmHg / mmH<sub>2</sub>O / inHg / inH<sub>2</sub>O / (kgf /cm<sup>2</sup>) / PSI / mbar / bar / Pa, default=hPa}

#### **F600 submenu** (LOG MENU)

Logging settings.

**F601:** logging enabling/disabling {On/OFF, default=On}

**F602:** choice between cyclical management (the new data overwrite the old ones when the memory is full) or non-cyclical management (logging stops when the memory is full) of the instrument internal memory {YES=cyclical management / NO=non-cyclical management, default=YES}

**F603:** logging interval (if it is higher than the measuring interval, the average of the measurements acquired during the interval will be stored) {default=30 s}

**F604:** measurements acquisition interval {default=1 s}. If a value higher than the logging interval is set, the measurements will be detected with interval equal to the logging interval.

**F605:** deletion of all stored measurements from the instrument memory {YES/NO}

**F700 submenu** (AN OUT MENU)

Setting of the analog outputs.

**F710: analog output 1**

**F711:** 0-20 mA / 4-20 mA selection for the current output {default=4-20 mA}

**F712:** 0-5 V / 0-10 V selection for the voltage output {default=0-10 V}

**F713:** value of the quantity associated with the analog output corresponding to 0/4 mA and 0 V {default=-100 Pa}

**F714:** value of the quantity associated with the analog output corresponding to 20 mA and 5/10 V {default=+100 Pa}

**F715:** analog output test mode. The current output goes to the value entered. Set OFF to exit the test mode.

**F716:** analog output test mode. The voltage output goes to the value entered. Set OFF to exit the test mode.

**F720: analog output 2**

**F721:** 0-20 mA / 4-20 mA selection for the current output {default=4-20 mA}

**F722:** 0-5 V / 0-10 V selection for the voltage output {default=0-10 V}

**F723:** value of the quantity associated with the analog output corresponding to 0/4 mA and 0 V {default=0.0 °C}

**F724:** value of the quantity associated with the analog output corresponding to 20 mA and 5/10 V {default=100.0 °C}

**F725:** analog output test mode. The current output goes to the value entered. Set OFF to exit the test mode.

**F726:** analog output test mode. The voltage output goes to the value entered. Set OFF to exit the test mode.

**F730: analog output 3**

**F731:** 0-20 mA / 4-20 mA selection for the current output {default=4-20 mA}

**F732:** 0-5 V / 0-10 V selection for the voltage output {default=0-10 V}

**F733:** value of the quantity associated with the analog output corresponding to 0/4 mA and 0 V {default=0.0 %RH}

**F734:** value of the quantity associated with the analog output corresponding to 20 mA and 5/10 V {default=100.0 %RH}

**F735:** analog output test mode. The current output goes to the value entered. Set OFF to exit the test mode.

**F736:** analog output test mode. The voltage output goes to the value entered. Set OFF to exit the test mode.

**F800 submenu** (LAN MENU)

LAN settings.

**F801:** LAN module reset {YES/nO}. **if the LAN module configuration is changed, the new settings are not immediately activated, but only after the reset of the module. To immediately activate the new settings, set this parameter to YES.**

**F802:** set the default configuration of the LAN module {YES/nO, default=nO}

**F803:** enable the sending of alarm e-mail {On/OFF, default=On}

**F804:** enable the sending of data via e-mail {On/OFF, default=OFF}

- F805:** sending interval of the of data via e-mail {Real time / 15 min / 30 min / 1 hour / 2 hours / 4 hours / 8 hours / 12 hours / 1 day / 2 days / 4 days / 1 week, default=15 min}
- F806:** format of the data sent via e-mail {LOG=format for the database and displaying with the Monitor function of the web server, CSV=format for Excel®, default=LOG}
- F807:** enable the sending of data via FTP {On/OFF, default=OFF}
- F808:** sending interval of the of data via FTP {Real time / 15 min / 30 min / 1 hour / 2 hours / 4 hours / 8 hours / 12 hours / 1 day / 2 days / 4 days / 1 week, default=15 min}
- F809:** format of the data sent via FTP {LOG=format for the database and displaying with the Monitor function of the web server, CSV=format for Excel®, default=LOG}
- F810:** enable the sending of data to the Cloud {On/OFF, default=OFF}
- F811:** sending interval of the of data to the Cloud {Real time / 15 min / 30 min / 1 hour / 2 hours / 4 hours / 8 hours / 12 hours / 1 day / 2 days / 4 days / 1 week, default=15 min}
- F812:** enable the sending of data to the PC in which the server function of the HDServer1 software is active {On/OFF, default=OFF}
- F813:** sending interval of the of data to the PC in which the server function of the HDServer1 software is active {Real time / 15 min / 30 min / 1 hour / 2 hours / 4 hours / 8 hours / 12 hours / 1 day / 2 days / 4 days / 1 week, default=15 min}

#### **F900 submenu** (MODBUS MENU)

Modbus settings.

- F901:** Modbus address {1...247, default=1}
- F902:** RS485 baud rate in kbps {9.6 / 19.2 / 38.4 / 57.6 / 115.2, default=19.2}
- F903:** RS485 communication mode {8N1 / 8N2 / 8E1 / 8E2 / 8O1 / 8O2, default=8E1}
- F904:** waiting of 3.5 characters after transmission with Modbus protocol {nO=violate protocol and go in receiving mode right after transmission / YES=respect protocol and wait 3.5 characters after transmission, default=nO}
- F905:** enabling of the password for changing the configuration via Modbus {On/OFF, default=OFF}

#### **FA00 submenu** (CLK MENU)

Clock settings.

- FA01:** year
- FA02:** month
- FA03:** day
- FA04:** hour
- FA05:** minutes
- FA06:** enabling of the automatic synchronization of the internal clock with a reference server {On/OFF, default=OFF}
- FA07:** time zone {default=0}

**Fb00 submenu** (PSW MENU)

Password settings.

**Fb01:** exits the menu and deactivates immediately the password {YES/nO}. The password will not remain active for some minutes as it normally happens when exiting the menu: you will need to re-enter the password even if you re-access immediately the menu.

**Fb02:** setting of the user-level password {default=0000}

**Fb03:** locking of the instrument keyboard {YES/nO, default=nO}. If the keyboard is locked, keep the **MENU/↵** key pressed for 7 seconds to unlock it.

**FC00 submenu** (CAL MENU)

Calibration settings.

**FC01:** relative humidity sensor calibration at 75%RH

**FC02:** relative humidity sensor calibration at 33%RH

**FC03:** differential pressure calibration at zero

**FC04:** enabling of the differential pressure auto-calibration at zero {On/OFF, default=On}

**FC05:** interval, in minutes, of the differential pressure auto-calibration at zero {5...360, default=60}

**FC06:** differential pressure second calibration point (in Pa)

**FC07:** reset of the differential pressure second calibration point

**FC08:** integration coefficient of the differential pressure measurement

**FC09:** type of calibration used {FACT=factory / USEr=user, default=FACT}

## 11 Modbus protocol

The device general information, consisting of manufacturer, model and firmware version, can be read through the function code **0x2B/0x0E**.

The complete list of Modbus registers is shown below. If you try to read a register that is not present, the instrument returns the fixed value 32767. The list of the available registers can be downloaded in the PC using the function " *Download the list of MODBUS registers of the device* " included in the *Settings* sections of HD35AP-S software (see software instructions).

The following conventions have been used in the tables:

- Type: **b** = bit, **B** = 8 bits (Byte), **W** = 16 bits without sign (Word), **SW** = 16 bits with sign
- **(x10)** = decimal value expressed as an integer (e.g., if the content of the register is 184, the value is to be intended as 18,4).
- **(x100)** = centesimal value expressed as an integer (e.g., if the content of the register is 500, the value is to be intended as 5,00).

The commands for requesting units of measurement return an index according to the correspondence indicated in the table below:

### Indexes of the units of measurement

Index	Unit of meas.	Index	Unit of meas.	Index	Unit of meas.	Index	Unit of meas.	Index	Unit of meas.
0	°C	14	inchH <sub>2</sub> O	28	V	42	inch/h	56	μmol/(m <sup>2</sup> s)
1	°F	15	kgf/cm <sup>2</sup>	29	mV	43	counts/h	57	mm/day
2	%UR	16	PSI	30	mA	44	mW/m <sup>2</sup>	58	kV
3	g/m <sup>3</sup>	17	m/s	31	ppm	45	m	59	A
4	g/kg	18	km/h	32	Hz	46	s	60	kA
5	mbar	19	ft/s	33	%	47	μW/lumen	61	cm/s
6	bar	20	mph	34	degrees	48	dB	62	klux
7	Pa	21	knot	35	lux	49	dBA	63	m <sup>3</sup>
8	hPa	22	W/m <sup>2</sup>	36	m <sup>2</sup> /s	50	kWh	64	g/m <sup>2</sup> s
9	kPa	23	μW/cm <sup>2</sup>	37	g (*)	51	l/s	65	μg/m <sup>3</sup>
10	atm	24	Wh/m <sup>2</sup>	38	mm	52	l/min	66	μm
11	mmHg	25	kWh/m <sup>2</sup>	39	inch	53	gallon/min		
12	mmH <sub>2</sub> O	26	J/m <sup>2</sup>	40	counts	54	m <sup>3</sup> /min		
13	inchHg	27	μJ/cm <sup>2</sup>	41	mm/h	55	m <sup>3</sup> /h	255	Not defined

(\*) Gravity acceleration

### Discrete Inputs

Address	Type	Description
7	b	If 1, at least a quantity is in alarm.

## Coils

Address	Type	Description
0	b	Receiving mode after transmission with Modbus protocol: 0=violate protocol and go in receiving mode right after transmission 1=respect protocol and wait 3.5 characters after transmission
1	b	Logging status: 0=active, 1=inactive
2	b	Logging mode: 0=non cyclic, 1=cyclic
3	b	Set 1 to delete the device logging memory. Bit zeroing is automatic.
9	b	Protection of configuration with password: 0=no, 1=yes Changing the parameter requires the Administrator password (see Holding Register 10036).
23	b	Enabling of the lower alarm threshold for the quantity #1: 0= disabled, 1= enabled
24	b	Enabling of the lower alarm threshold for the quantity #2: 0= disabled, 1= enabled
25	b	Enabling of the lower alarm threshold for the quantity #3: 0= disabled, 1= enabled
26	b	Enabling of the lower alarm threshold for the quantity #4: 0= disabled, 1= enabled
27	b	Enabling of the lower alarm threshold for the quantity #5: 0= disabled, 1= enabled
28	b	Enabling of the lower alarm threshold for the quantity #6: 0= disabled, 1= enabled
35	b	Enabling of the upper alarm threshold for the quantity #1: 0= disabled, 1= enabled
36	b	Enabling of the upper alarm threshold for the quantity #2: 0= disabled, 1= enabled
37	b	Enabling of the upper alarm threshold for the quantity #3: 0= disabled, 1= enabled
38	b	Enabling of the upper alarm threshold for the quantity #4: 0= disabled, 1= enabled
39	b	Enabling of the upper alarm threshold for the quantity #5: 0= disabled, 1= enabled
40	b	Enabling of the upper alarm threshold for the quantity #6: 0= disabled, 1= enabled
47	b	Enabling of the buzzer for the quantity #1: 0= disabled, 1=enabled
48	b	Enabling of the buzzer for the quantity #2: 0= disabled, 1=enabled
49	b	Enabling of the buzzer for the quantity #3: 0= disabled, 1=enabled
50	b	Enabling of the buzzer for the quantity #4: 0= disabled, 1=enabled
51	b	Enabling of the buzzer for the quantity #5: 0= disabled, 1=enabled
52	b	Enabling of the buzzer for the quantity #6: 0= disabled, 1=enabled
59	b	Enabling of the buzzer "Latch" function for the quantity #1: 0= disabled, 1=enabled
60	b	Enabling of the buzzer "Latch" function for the quantity #2: 0= disabled, 1=enabled
61	b	Enabling of the buzzer "Latch" function for the quantity #3: 0= disabled, 1=enabled
62	b	Enabling of the buzzer "Latch" function for the quantity #4: 0= disabled, 1=enabled
63	b	Enabling of the buzzer "Latch" function for the quantity #5: 0= disabled, 1=enabled

Address	Type	Description
64	b	Enabling of the buzzer "Latch" function for the quantity #6: 0= disabled, 1=enabled
71	b	Type of calibration used: 0=factory, 1=user
72	b	Set 1 to carry out the zero calibration of the differential pressure. Bit zeroing is automatic.
73	b	Enabling of the auto-calibration of the zero of the differential pressure: 0=disabled, 1=enabled

### Input Registers

Address	Type	Description
<b>Measured values and status of measurement alarms</b>		
2	SW	<b>RELATIVE HUMIDITY</b> in % (x10).
3	B	Relative humidity alarm: 0=OFF, 1=lower threshold alarm, 2=higher threshold alarm.
4	SW	<b>DEW POINT</b> in the set measurement unit (x10).
5	B	Dew Point alarm: 0=OFF, 1=lower threshold alarm, 2=higher threshold alarm.
10	SW	<b>ABSOLUTE HUMIDITY</b> in g/m <sup>3</sup> (x10).
11	B	Absolute humidity alarm: 0=OFF, 1=lower threshold alarm, 2=higher threshold alarm.
12	SW	<b>WET BULB TEMPERATURE</b> in the set measurement unit (x10).
13	B	Wet bulb temperature alarm: 0=OFF, 1=lower threshold alarm, 2=higher threshold alarm.
84	SW	<b>DIFFERENTIAL PRESSURE</b> in the set measurement unit (the multiplier depends on the set unit).
85	B	Differential pressure alarm: 0=OFF, 1=lower threshold alarm, 2=higher threshold alarm.
174	SW	<b>TEMPERATURE</b> with 4-wire Pt100 sensor of the T/RH combined probe in the set measurement unit (x100).
175	B	Alarm for temperature with 4-wire Pt100 sensor of the T/RH combined probe: 0=OFF, 1=lower threshold alarm, 2=higher threshold alarm.
<b>Measurement units and resolution</b>		
5004	W	<b>DEW POINT</b> measurement unit: 0=°C, 1=°F.
5012	W	<b>WET BULB TEMPERATURE</b> measurement unit: 0=°C, 1=°F.
5084	W	<b>DIFFERENTIAL PRESSURE</b> measurement unit: see the table of indexes
5085	SW	<b>DIFFERENTIAL PRESSURE</b> resolution: ..., -2=100, -1=10, 0=1, 1=0.1, 2=0.01, ...
5174	W	Unit of measurement for <b>TEMPERATURE</b> with 4-wire Pt100 sensor of the T/RH combined probe: 0=°C, 1=°F.
<b>General information</b>		
10000	W	Year of last measurement.
10001	W	Month of last measurement.
10002	W	Day of last measurement.
10003	W	Hour of last measurement.
10004	W	Minutes of last measurement.
10005	W	Seconds of last measurement.
10010	W	Time, in seconds, elapsed since the last transmitted packet.
10011	W	RF signal level.

Address	Type	Description
10013	W	Password level for the current connection: 0=no password, 1=user level, 2= administrator level

### Holding Registers

Address	Type	Description
<b>Measurement alarm thresholds</b>		
2	SW	<b>RH</b> lower alarm threshold in % (x10).
3	SW	RH higher alarm threshold in % (x10).
4	SW	<b>DEW POINT</b> lower alarm threshold in the set measurement unit (x10).
5	SW	Dew point higher alarm threshold in the set measurement unit (x10).
10	SW	<b>ABSOLUTE HUMIDITY</b> lower alarm threshold in g/m <sup>3</sup> (x10).
11	SW	Absolute humidity higher alarm threshold in g/m <sup>3</sup> (x10).
12	SW	<b>WET BULB TEMPERATURE</b> lower alarm threshold in the set measurement unit (x10).
13	SW	Wet bulb temperature higher alarm threshold in the set measurement unit (x10).
84	SW	<b>DIFFERENTIAL PRESSURE</b> lower alarm threshold in the set measurement unit (the multiplier depends on the set unit).
85	SW	Differential pressure higher alarm threshold in the set measurement unit (the multiplier depends on the set unit).
174	SW	Lower alarm threshold for <b>TEMPERATURE</b> with 4-wire Pt100 sensor of the T/RH combined probe in the set measurement unit (x100).
175	SW	Higher alarm threshold for temperature with 4-wire Pt100 sensor of the T/RH combined probe in the set measurement unit (x100).
<b>General information</b>		
da 10000 a 10019	B	User code with ASCII codification. Acceptable values are in the set {32,...,126}.
10020	W	Current year
10021	W	Current month
10022	W	Current day
10023	W	Current hour
10024	W	Current minute
10025	W	Current second
10026	W	Measurement interval: 0=1s, 1=2s, 2=5s, 3=10s, 4=15s, 5=30s, 6=1min, 7=2min, 8=5min, 9=10min, 10=15min, 11=30min, 12=1h
10027	W	Logging interval: 0=1s, 1=2s, 2=5s, 3=10s, 4=15s, 5=30s, 6=1min, 7=2min, 8=5min, 9=10min, 10=15min, 11=30min, 12=1h
10032	W	Temperature measurement unit: 0=°C, 1=°F
10034	W	Baud rate RS485: 0=9600, 1=19200, 3=38400 bit/s
10035	W	RS485 communication mode: 0=8N1, 1=8N2, 2=8E1, 3=8E2, 4=8O1, 5=8O2
10036	W	Password to be supplied to enable configuration change commands. The reading provides the fixed value 32768.
da 10037 a 10046	B	Device group with ASCII codification. Acceptable values are in the set {32,...,126}.
10049	W	Differential pressure unit of measurement: see the table of indexes

Address	Type	Description
10052	W	Setting of the quantities to be displayed in the automatic viewing cycle. Set the i-th bit (starting from LSB) to 1 if you wish to include the i-th quantity in the viewing cycle. <i>Example:</i> if 1=Temp., 2=RH, 3=Td, 4=Diff.Press., 5=AH, 6=Tw, the register is set to 0000 0000 0001 0010, only the relative humidity (RH) and the absolute humidity (AH) will be displayed alternatively.
10064	W	Modbus address
10065	W	Buzzer silencing time, in minutes, for the quantity #1
10066	W	Buzzer silencing time, in minutes, for the quantity #2
10067	W	Buzzer silencing time, in minutes, for the quantity #3
10068	W	Buzzer silencing time, in minutes, for the quantity #4
10069	W	Buzzer silencing time, in minutes, for the quantity #5
10070	W	Buzzer silencing time, in minutes, for the quantity #6
10077	B	Current range of the analog output 1: 0=0...20 mA, 1=4...20 mA
10078	B	Voltage range of the analog output 1: 0=0...10 V, 1=0...5 V
10079	SW	Value of the quantity associated with the analog output 1 corresponding to 0/4 mA and 0 V
10080	SW	Value of the quantity associated with the analog output 1 corresponding to 20 mA and 5/10 V
10081	W	Analog output 1 test register: the current output goes to the value, in tenths of mA, entered in the register (e.g., enter 120 for 12.0 mA). Set -1 to exit the test mode.
10082	W	Analog output 1 test register: the voltage output goes to the value, in tenths of V, entered in the register (e.g., enter 50 for 5.0 V). Set -1 to exit the test mode.
10083	B	Current range of the analog output 2: 0=0...20 mA, 1=4...20 mA
10084	B	Voltage range of the analog output 2: 0=0...10 V, 1=0...5 V
10085	SW	Value of the quantity associated with the analog output 2 corresponding to 0/4 mA and 0 V
10086	SW	Value of the quantity associated with the analog output 2 corresponding to 20 mA and 5/10 V
10087	W	Analog output 2 test register: the current output goes to the value, in tenths of mA, entered in the register (e.g., enter 120 for 12.0 mA). Set -1 to exit the test mode.
10088	W	Analog output 2 test register: the voltage output goes to the value, in tenths of V, entered in the register (e.g., enter 50 for 5.0 V). Set -1 to exit the test mode.
10089	B	Current range of the analog output 3: 0=0...20 mA, 1=4...20 mA
10090	B	Voltage range of the analog output 3: 0=0...10 V, 1=0...5 V
10091	SW	Value of the quantity associated with the analog output 3 corresponding to 0/4 mA and 0 V
10092	SW	Value of the quantity associated with the analog output 3 corresponding to 20 mA and 5/10 V
10093	W	Analog output 3 test register: the current output goes to the value, in tenths of mA, entered in the register (e.g., enter 120 for 12.0 mA). Set -1 to exit the test mode.
10094	W	Analog output 3 test register: the voltage output goes to the value, in tenths of V, entered in the register (e.g., enter 50 for 5.0 V). Set -1 to exit the test mode.
10095	W	Period, in minutes, of the auto-calibration of the zero of the differential pressure

Address	Type	Description
10098	W	Integration coefficient of the differential pressure measurement: 0...9, default = 0
da 20000 a 20011	B	User code with ASCII codification of the quantity #1.
da 20012 a 20023	B	User code with ASCII codification of the quantity #2.
da 20024 a 20035	B	User code with ASCII codification of the quantity #3.
da 20036 a 20047	B	User code with ASCII codification of the quantity #4.
da 20048 a 20059	B	User code with ASCII codification of the quantity #5.
da 20060 a 20071	B	User code with ASCII codification of the quantity #6.
<b>Measurement alarm hysteresis and delay time</b>		
30002	B	<b>RH</b> alarm hysteresis in % (x10).
30003	B	RH alarm delay time in seconds.
30004	B	<b>DEW POINT</b> alarm hysteresis in the set measurement unit (x10).
30005	B	Dew point alarm delay time in seconds.
30010	B	<b>ABSOLUTE HUMIDITY</b> alarm hysteresis in g/m <sup>3</sup> (x10).
30011	B	Absolute humidity alarm delay time in seconds.
30012	B	<b>WET BULB TEMPERATURE</b> alarm hysteresis in the set measurement unit (x10).
30013	B	Wet bulb temperature alarm delay time in seconds.
30084	B	<b>DIFFERENTIAL PRESSURE</b> alarm hysteresis in the set measurement unit (the multiplier depends on the set unit).
30085	B	Differential pressure alarm delay time in seconds.
30174	B	Alarm hysteresis for <b>TEMPERATURE</b> with 4-wire Pt100 sensor of the T/RH combined probe in the set measurement unit (x100).
30175	B	Alarm delay time for temperature with 4-wire Pt100 sensor of the T/RH combined probe in seconds.

## 12 Maintenance

Do not use aggressive cleaning agents or incompatible with the materials indicated in the technical specifications. For cleaning the instrument, use a soft dry cloth or slightly dampened with clean water.

## 13 Safety instructions

The instrument proper operation and operating safety can be ensured only in the climatic conditions specified in this manual and if all standard safety measures as well as the specific measures described in this manual are followed.

Do not use the instruments in places where there are:

- Corrosive or flammable gases.
- Direct vibrations or shocks to the instrument.
- High-intensity electromagnetic fields, static electricity.

### User obligations

The instrument operator shall follow the directives and regulations below that refer to the treatment of dangerous materials:

- EU directives on workplace safety.
- National law regulations on workplace safety.
- Accident prevention regulations.


## 14 Probes and accessories ordering codes

The instrument is supplied with HD35AP-S and HDServer1 software downloadable from the website.

**HP3517E... combined temperature and relative humidity probe, CP23 USB cable and HD35AP-CFR21 software (for system management in accordance with FDA 21 CFR part 11 recommendations) must be ordered separately.**

### Temperature and relative humidity combined probes

**HP3517E...** Temperature and relative humidity combined probe. Pt100 temperature sensor. Ø14 mm. Filter in PBT and stainless steel grid. 8-pole M12 connector.

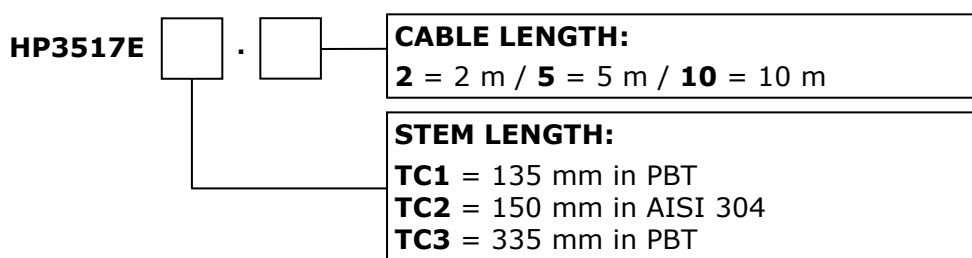

### Accessories

<b>CP23</b>	Direct USB connection cable with mini-USB male connector on the instrument side and A-type USB male connector on the PC side.
<b>HD75</b>	Saturated solution for testing the relative humidity sensor at 75% RH. Includes screw adaptor for Ø14 mm probes.
<b>HD33</b>	Saturated solution for testing the relative humidity sensor at 33% RH. Includes screw adaptor for Ø14 mm probes.
<b>HD11</b>	Saturated solution for testing the relative humidity sensor at 11% RH. Includes screw adaptor for Ø14 mm probes.

## NOTES

---

## NOTES

---

## WARRANTY

The manufacturer is required to respond to the "factory warranty" only in those cases provided by Legislative Decree 6 September 2005 - n. 206. Each instrument is sold after rigorous inspections; if any manufacturing defect is found, it is necessary to contact the distributor where the instrument was purchased from. During the warranty period (24 months from the date of invoice) any manufacturing defects found will be repaired free of charge. Misuse, wear, neglect, lack or inefficient maintenance as well as theft and damage during transport are excluded. Warranty does not apply if changes, tampering or unauthorized repairs are made on the product. Solutions, probes, electrodes and microphones are not guaranteed as the improper use, even for a few minutes, may cause irreparable damages.


The manufacturer repairs the products that show defects of construction in accordance with the terms and conditions of warranty included in the manual of the product. For any dispute, the competent court is the Court of Padua. The Italian law and the "Convention on Contracts for the International Sales of Goods" apply.

## TECHNICAL INFORMATION

The quality level of our instruments is the result of the continuous product development. This may lead to differences between the information reported in the manual and the instrument you have purchased.

We reserve the right to change technical specifications and dimensions to fit the product requirements without prior notice.

## DISPOSAL INFORMATION

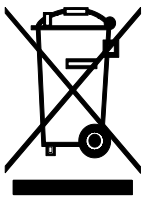

Electrical and electronic equipment marked with specific symbol in compliance with 2012/19/EU Directive must be disposed of separately from household waste. European users can hand them over to the dealer or to the manufacturer when purchasing a new electrical and electronic equipment, or to a WEEE collection point designated by local authorities. Illegal disposal is punished by law.

Disposing of electrical and electronic equipment separately from normal waste helps to preserve natural resources and allows materials to be recycled in an environmentally friendly way without risks to human health.



**RoHS**

**senseca.com**



Senseca Italy S.r.l.  
Via Marconi, 5  
35030 Selvazzano Dentro (PD)  
ITALY  
[info@senseca.com](mailto:info@senseca.com)

